OPERATING AND SERVICE MANUAL

SIGNAL ANALYZER

5480A

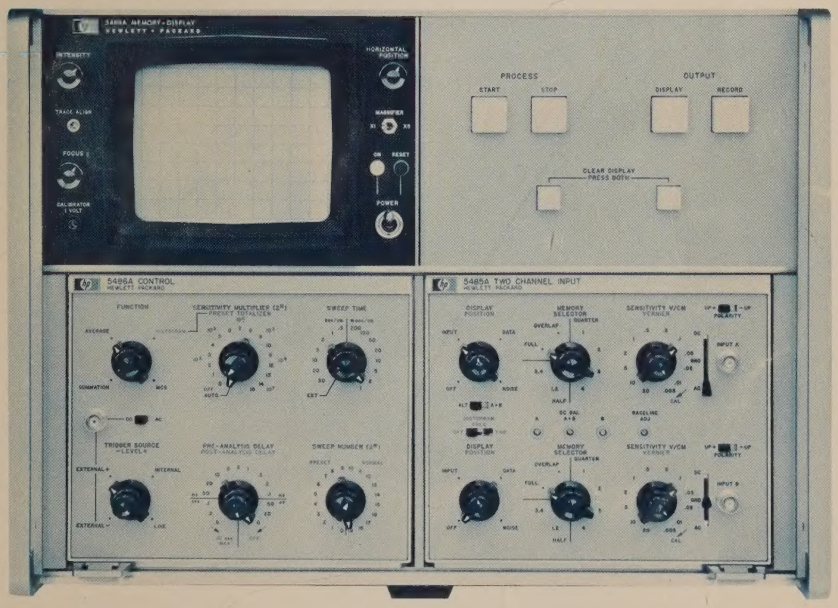

HEWLETT hp PACKARD

HP 5480A

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

SIGNAL ANALYZER
5480A

WITH 5485A and 5486A PLUG-INS

ALL SERIALS

This manual applies directly to all standard Hewlett-Packard Model 5480A Signal Analyzer systems using the Model 5485A Two Channel Input and Model 5486A Control plug-ins. See INSTRUMENT IDENTIFICATION, Paragraph 1-5.

SPECIAL INSTRUMENTS

The information required to relate this manual to special modifications is supplied on special insert sheets. If this information is missing, contact any HP Sales and Service office, giving full specification number, instrument name, and serial number.

Copyright HEWLETT-PACKARD COMPANY 1968
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

02810-1 Printed: NOV 1968

HEWLETT hp PACKARD

MANUAL CONTENT AND ORGANIZATION

This is a system operating manual only. Service information is contained in a separate set of manuals. Operating and service information is divided among the manuals as follows:

OPERATING MANUAL:

General system information
Packaging information
System installation information
Incoming inspection check
Operating information

SERVICE MANUAL - VOLUME I:

System block diagrams, includes principles of operation
Adjustment procedures
Troubleshooting procedures
Adjustment and test point locations and waveforms

SERVICE MANUAL - VOLUME II AND HIGHER:

Each of these manuals is for one instrument in the Signal Analyzer system, and contains the following information:

General information about that instrument
Wiring and schematic drawings and/or lists
Component locators for assemblies
Assembly function descriptions
Parts lists

MANUAL AND MANUAL CHANGES (ORDERING INFORMATION)

This manual provides operating information for all Hewlett-Packard Model 5480A Signal Analyzer systems including Model 5485A Two Channel Input and Model 5486A Control plug-ins. Manual changes required for special instruments will be detailed in special change sheets included with manuals for those systems. If information is missing, it may be obtained by contacting nearest Hewlett-Packard Sales and Service office listed at back of this manual. When requesting information or additional manuals for your system, be sure to include complete Model or Specification number, instrument name, and serial number. (For serial number information, see Paragraph 1-5.)

TABLE OF CONTENTS

Section		Page
I	GENERAL INFORMATION	1-1
	1-1. Introduction	1-1
	1-5. Instrument Identification	1-1
	1-6. Model Number and Name	1-1
	1-8. Serial Numbers	1-1
	1-10. Efficiency	1-1
II	INSTALLATION	2-0
	2-1. Unpacking and Inspection	2-0
	2-2. General	2-0
	2-4. CRT Warranty	2-0
	2-6. Mounting	2-0
	2-8. Storage and Shipment	2-0
	2-9. Packaging	2-0
	2-11. Environment	2-0
	2-13. Connections	2-0
III	OPERATION	3-1
	3-1. Basic Concept	3-1
IV	MAINTENANCE	4-0
	4-1. Scheduling	4-0
	4-3. Lubrication	4-0
	4-5. Operator Adjustments	4-0
	4-12. Cleaning	4-1
	4-15. Calibration and Adjustment Procedure	4-1

LIST OF TABLES

1-1.	Equipment Furnished	1-1
1-2.	HP Equipment Available	1-1
1-3.	Specifications	1-2
2-1.	Input/Output Connectors	2-1
2-2.	Incoming Inspection Check	2-6

LIST OF FIGURES

1-1.	5480A Signal Analyzer System	1-0
2-1.	Rack Mounting	2-0
2-2.	Connection of Sampling Oscilloscope to Extend Frequency Range	2-1
2-3.	Connection of X-Y Display, Recorder, or Oscilloscope	2-1
3-1.	Time to PRESET (Nomograph)	3-1
3-2.	Pre-Analysis and Post-Analysis Delays	3-1
3-3.	Memory-Display Unit (5480A)	3-2
3-4.	Control Plug-in (5486A)	3-4
3-5.	Two Channel Input Plug-in (5485A)	3-6
3-6.	Setup and Turn-on	3-7
3-7.	Average	3-8
3-8.	Summation	3-10
3-9.	Histograms	3-12
3-10.	MCS (Multichannel Scaling)	3-13

Figure 1-1. 5480A Signal Analyzer System

MODEL 5480A

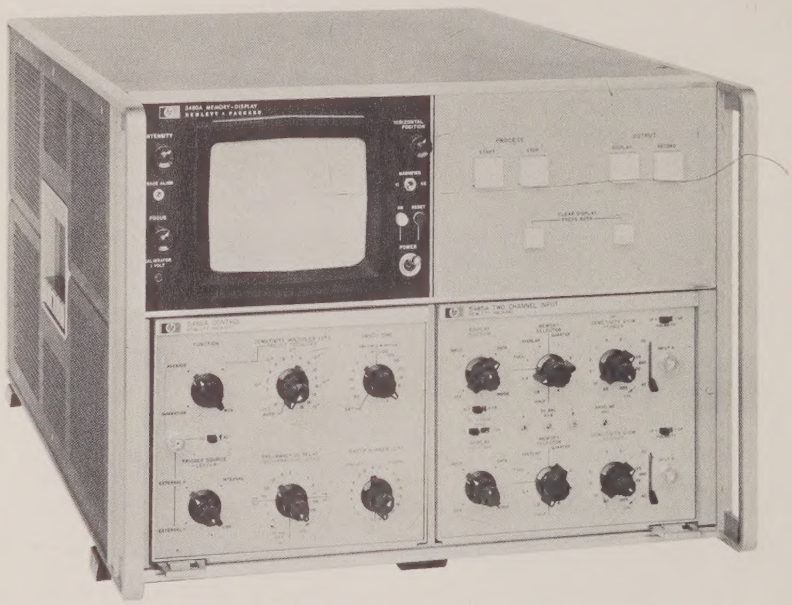

RACK MOUNTING KIT

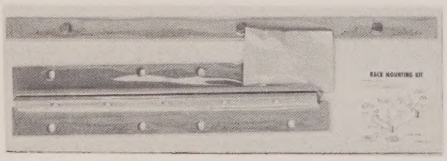

POWER CABLE

EXTENDER BOARDS

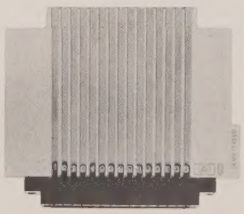

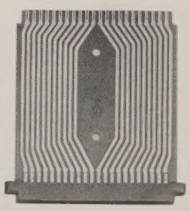

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION

1-2. The Hewlett-Packard Model 5480A Signal Analyzer system is best described as an oscilloscope for looking at signals that are buried in noise. The 5480A can improve the signal-to-noise ratio of a waveform by as much as 1000 times (60 dB). Operating in real time, "on line", the 5480A enables the operator to see results while an experiment is in progress, even though its input signal may be so obscured by noise that raw data seem to contain little useful information.

1-3. Only three requirements must be placed on a system to enable use of the 5480A Signal Analyzer System:

a. The signal waveform must be repetitive (not necessarily periodic).

b. A sync pulse must be available to signal the beginning of each repetition. In some cases a sync pulse can be derived from a frequency synthesizer.

c. The highest frequency component of the input signal must be less than 50 kHz. However, this limit can be extended using a sampling oscilloscope (see Section III).

1-4. The 5480A Signal Analyzer (main frame) contains the Display, Memory, Main Frame Logic, Switching Logic, and Power Supply sections of the system. System functions are controlled by the left-hand plug-in, and input signals are handled by the right-hand plug-in.

1-5. INSTRUMENT IDENTIFICATION

1-6. Model Number and Name

1-7. Each unit in the Signal Analyzer is identified by Model number and name as a separate instrument; these are:

Model 5480A Memory/Display (main frame unit)
Model 5485A Two Channel Input (analog plug-in unit)
Model 5486A Control (logic plug-in unit)

The Model 5480A Signal Analyzer System consists of the main frame unit and one logic plug-in and one analog plug-in; when using this Model number be sure to specify whether you are referring to the whole Signal Analyzer System or just to the Memory/Display unit.

1-8. Serial Numbers

1-9. Each unit in the Model 5480A Signal Analyzer system is identified by a two-section, eight-digit (000-00000) serial number located on rear panel of unit. The five-digit portion of the serial number is unique to each instrument; the three-digit portion is used to document changes. Include the complete serial number, Model number, and instrument name in correspondence about any unit in your Signal Analyzer.

Table 1-1. Equipment Furnished

Power Cord	HP Part No. 8120-0078
Rack Mounting Kit	HP Part No. 5060-0779

Table 1-2. HP Equipment Available

I/O Coupler (interfaces between Signal Analyzer and Computer, Digital Recorder, Tape Punch, Teleprinter, Tape Reader)	5495A
Computer	2114A, 2115A, 2116A
Digital Recorder	5050A, 562A
Tape Punch	2753A
Teleprinter	2752A
Tape Reader	2737A
Oscilloscope	120B
X-Y Display	1300A
X-Y Recorder	7004/with plug-ins
Point Plotter	
Sampling Oscilloscope (for increased frequency response)	140A with plug-ins, see Figure 2-2

1-10. EFFICIENCY

1-11. Efficiency in signal averaging is a measure of the time it takes to obtain a specified signal-to-noise ratio improvement; as efficiency increases, required time decreases. By adding a low-pass filter in series with the Signal Analyzer input, averaging time can be reduced since high-frequency noise can be removed by filtering instead of by averaging. In many situations, the system of which the Signal Analyzer is a part contains an amplifier which is bandlimited to suit the experiment. The upper cutoff frequency of the amplifier will in many applications provide sufficient filtering so that an added filter will not be required.

1-12. Cutoff frequency of the low-pass filter used to improve efficiency of the Signal Analyzer system depends on SWEEP TIME setting and the number of points to be used to represent the sharpest rise time of the input signal under study. The user will rarely choose to study a waveform with a rise time of fewer than five points.

EXAMPLE: SWEEP TIME is 100 msec/cm.

a. One 10 cm sweep takes 1 sec to complete. Since each sweep consists of 1000 points, each point represents 1 msec, and a rise time spanning 5 points in the display is 5 msec.

b. To convert rise time to frequency, divide rise time into "0.35", frequency = .35/rise time. In this example, this becomes: cutoff frequency (highest displayed frequency) = .35/5 msec = 70 Hz. A low-pass filter at the Signal Analyzer input should pass this frequency and cut off all higher frequencies.

Table 1-3. Specifications

AVERAGING: 3 methods. Up to 60 dB signal-to-noise ratio improvement.

1. CALIBRATED AVERAGING MODE: Averager performs a true calibrated average. Waveform amplitudes are read directly from the CRT in volts/cm without normalizing.

   Input Characteristics: (for 5485A 2 Channel Input plug-in):

   Bandwidth: dc to 50 kHz

   Sensitivity: 5 mV/cm to 20 V/cm in 1, 2, 5 steps.

   Input Impedance: 1 MΩ

   Maximum Input: 600V peak, ac coupled; dc coupled, 150V at 5 mV/cm, increasing to 350V at 20 V/cm.

   Polarity Inversion: +UP or -UP selectable

   A + B: Adds Channel B input to Channel A input and sum is fed through Channel A. Polarity of either channel may be inverted to give difference (A - B).

   ALT: Processes and displays both channels simultaneously.

   Resolution: 1000 points (or 500 or 250 by front-panel selector).

   Sampling Rate: 2 samples/sec through 100,000 samples/sec in 1, 2, 5 steps.

   Sample Time: 1.2 μsec

   ADC Clock Rate: 20 MHz

   ADC Resolution: 9 bits from 50 sec/cm through 5 msec/cm; 7 bits at 2 msec/cm; 5 bits at 1 msec/cm.

   ADC System Noise: <1% from 50 sec/cm through 2 msec/cm and <3% at 1 msec/cm (however, this noise is random and will be averaged out).

   Triggering:

   External:

   Slope: + or - selectable

   Amplitude: >100 mV (<10 msec rise time).

   Trigger level is adjustable.

   Maximum Input: 170 volts peak

   Input Impedance: 1 MΩ shunted by 30 pF

   Internal: Sweep is triggered by internally generated pulse occurring at end of each sweep. This free-running mode is used to control experiment.

   Line: Sweep is triggered by line frequency.

   Sweep Time: 1 msec/cm through 50 sec/cm in 1, 2, 5 steps

   Horizontal Magnifier: Expands horizontal axis by factor of 5.

   External Time Base: Up to 20 kHz allows sweep times from 5 msec/cm to infinity.

   Sweep Number: Number of sweeps to be averaged may be preselected from 1 through 2^{19} (524,288) in powers of 2.

   dB Improvement: dB of signal-to-noise ratio improvement from 0 dB to 57 dB in 3 dB increments can be selected using sweep number control. Improvement approaches 60 dB with 2^{19} sweep number, normal (weighted average).

   Memory Selection: Operator may select any quarter, either half, or full memory (1000 points).

   Overlap Display: Two waveforms may be stored, while two more are processed; then all four displayed simultaneously for comparison.

   Display: Operator may select CRT display of waveform as it is averaged, noise as it is removed from signal, or input signal after sampling.

2. WEIGHTED AVERAGING: Averager is able to follow a slowly changing waveform by averaging only the most recent repetitions. Essentially the averager forgets old data in favor of the new. All specifications are identical with Calibrated Averaging.

3. SUMMATION MODE: In this mode the averager adds successive repetitions of the noise waveform, resulting in an uncalibrated display which is proportional to the averaged signal.

   Sensitivity Multiplier: Manual adjustment allows scaling vertical up or down in power of two increments up to 64 counts/cm.

   Automatic Scaling: Provides automatic scaling down of vertical in power-of-two increments to keep display on screen.

   Stable Baseline: Always represents 0 volts.

   All other specifications are identical with Calibrated Averaging, except Weighted Averaging is not possible.

HISTOGRAM MODE: Averager displays a probability versus frequency (or time interval) plot. The number of incoming pulses in a set gate time determines the memory location into which a count is placed. After several gate times, a distribution results.

Input Characteristics:
Bandwidth: dc to 5 MHz
Sensitivity: 100 mV
Input Impedance: 1 MΩ shunted by 30 pF

Table 1-3. Specifications Cont'd.

Frequency Ranges: 100 Hz/cm through 10 MHz/cm in 1, 2, 5 steps.

Time Interval Ranges: 50 sec/cm through 1 msec/cm in 1, 2, 5 steps.

Preset Totalizer: If desired, operator may preset number of values to be histogrammed from 10^2 through 10^7 in powers of 10.

Sensitivity Multiplier: Expands vertical to 64 counts/cm in power-of-two increments.

MULTICHANNEL SCALING (MCS) MODE: Averager displays a plot of frequency versus time. The averager sweeps through memory remaining at each location for the set gate time. The number of counts placed in each location is determined by the number of incoming pulses occurring during the gate time.

Pulse Requirements:

Amplitude: >2V (20V max)

Maximum Repetition Rate: 1 MHz

Minimum Pulse Width: 500 ns

Pulse Pair Resolution: 500 ns

Input Impedance: 3 kΩ minimum

Dwell Time Per Channel: 10 μsec through 0.5 sec in 1, 2, 5 steps (external time base: 50 μsec to infinity).

Sweep Modes: Sawtooth or triangular sweep. External time base input allows any desired sweep shape.

Triggering: External triggering is possible on sawtooth sweep.

OUTPUTS

Analog:

X-Y Recorder:

X: 0 to +10V sweep ramp; 0.2% linearity

Y: -4 to +4V; output is proportional to CRT display (0.5V output per cm deflection); 0.2% linearity.

NOTE: These X and Y signals will drive other devices such as scopes, or NMR systems.

Pen Lift Signal: +5V = pen up; 0V = pen down

Z-Axis: +5 volt blanking pulses for scope (can be used to gate noise output).

Point Plotter: (typically Moseley 7004A)

Seek: +10V, >50 μsec pulse to tell point plotter to seek a null.

Plot: >+2V, 200 nsec pulse accepted from point plotter indicating plot is complete.

X-Y signals are same as above.

Sweep Voltage: 0 to +1 volt sweep ramp; conveniently adjusted by changing resistors to give output ramp going from 0V to any value between 0 to +10V.

Sync: "Pos" provides +12V, >0.5 μsec pulse at end of each sweep (plus post-analysis delay); "Neg" provides same except -12V.

Sampling Pulses: Pulses go from +5 volts to Ground and return to +5V once each time the input is sampled.

Pulse Width: 100 ns

Noise: Train of voltage pulses whose amplitude equals difference between input and average; amplitude is proportional to CRT display of noise (1/2V per cm deflection). (This signal can be gated with Z-axis output.)

Digital: Four 50-pin connectors interface the averager, through the 5495A I/O Coupler, to computers, teleprinters, tape readers, and printers. A direct interface to all HP computers is available.

PRE-ANALYSIS DELAY: Provides calibrated delay between triggering signal and start of sweep. Delay range 20 nsec to 0.5 sec in 1, 2, 5 steps, plus no delay.

DISPLAY: 8 x 10 cm rectangular display CRT with internal graticule. 500 kHz bandwidth. 10-bit horizontal and vertical resolution of digital display. 1, 2, or 4 trace display depending on input channels used and memory sectioning. Independent vertical position and gain adjust for each channel. Vertical expander permits selection of suitable 10-bit vertical display.

BACK PANEL CONNECTION: Complete access to analog and stored digital information. Also provides for remote control. Convenient interface with other equipment.

GENERAL

Power: 115/230V, 50-60 Hz, 175W.

Dimensions: (5480A)

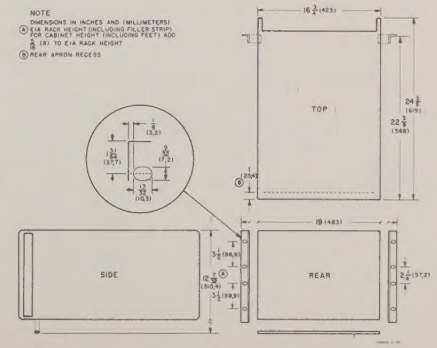

Weight: Net, 76 lb (34,5 kg) including HP 5485A and HP 5486A plug-ins.

SECTION II

INSTALLATION

2-1. UNPACKING AND INSPECTION

2-2. General

2-3. If shipping carton is damaged, ask that carrier's agent be present when instrument is unpacked. Inspect instrument for damage (scratches, dents, broken knobs, etc.). If instrument is damaged or fails to operate (see Incoming Inspection Check, Table 2-2), notify carrier and nearest Hewlett-Packard Sales and Service office immediately. Sales and Service offices are listed at back of this manual. Retain shipping carton and padding material for carrier's inspection. Sales office will arrange for repair or replacement of your instrument without waiting for claim against carrier to be settled.

2-4. CRT Warranty

2-5. The 5480A and its plug-ins are certified and warranted as stated on inside front cover of this manual. The CRT, however, is covered by a warranty separate from the rest of the instrument. The CRT warranty and warranty claim forms are located at rear of this manual. Should CRT fail within time specified on warranty, return CRT with warranty form completed.

2-6. MOUNTING

2-7. The 5480A is shipped with logic and analog plug-ins installed, and is ready for bench operation when power and signal connections are made. Additional parts necessary for rack mounting are packaged with the system. Rack installation should allow a free flow of cooling air. To convert the Signal Analyzer for rack installation, refer to Figure 2-1 and proceed as follows:

Figure 2-1. Rack Mounting

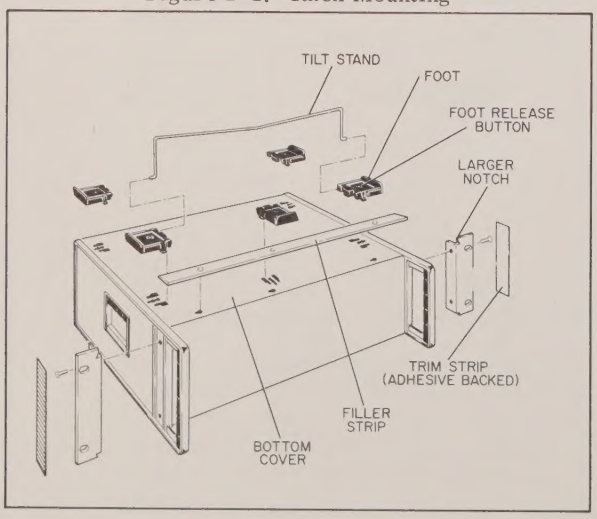

a. Remove tilt stand.

b. Remove feet (press the foot-release button, slide foot toward center of instrument, and lift off).

c. Remove adhesive-backed trim strips at front end of sides.

d. Attach filler strip along bottom edge of front panel.

e. Attach flanges to front end of sides where trim strips were removed (larger corner notch of flange is toward bottom of instrument). The Signal Analyzer is now ready to mount in a standard rack.

2-8. STORAGE AND SHIPMENT

2-9. Packaging

2-10. To protect valuable electronic equipment during storage or shipment, always use the best packaging methods available. Your Hewlett-Packard Sales and Service office can provide packaging material such as that used for original factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Here are two recommended packaging methods:

a. RUBBERIZED HAIR. Cover painted surfaces of instrument with protective wrapping paper. Pack instrument securely in strong corrugated container (350 lb/sq. in. bursting test) with 2-inch rubberized hair pads placed along all surfaces of instrument. Insert fillers between pads and container to ensure a snug fit.

b. EXCELSIOR. Cover painted surfaces of instrument with protective wrapping paper. Pack instrument in strong corrugated container (350 lb/sq. in. bursting test) with a layer of excelsior about 6 inches thick packed firmly against all surfaces of instrument.

2-11. Environment

2-12. Conditions during storage and shipment should normally be limited as follows:

a. Maximum altitude: 15K feet (4,5 km).

b. Maximum temperature: +149°F (+65°C).

c. Minimum temperature: -4°F (-20°C).

2-13. CONNECTIONS

2-14. Table 2-1 lists connections between Signal Analyzer units and external equipment. Internal Signal Analyzer connections are not listed here. Figures 2-2 and 2-3 show how to connect a sampling oscilloscope to increase frequency response and how to connect an X-Y Recorder, Point Plotter, or X-Y Display unit, for remote display or permanent record from the Signal Analyzer.

Figure 2-2. Connection of Sampling Oscilloscope to Extend Frequency Range

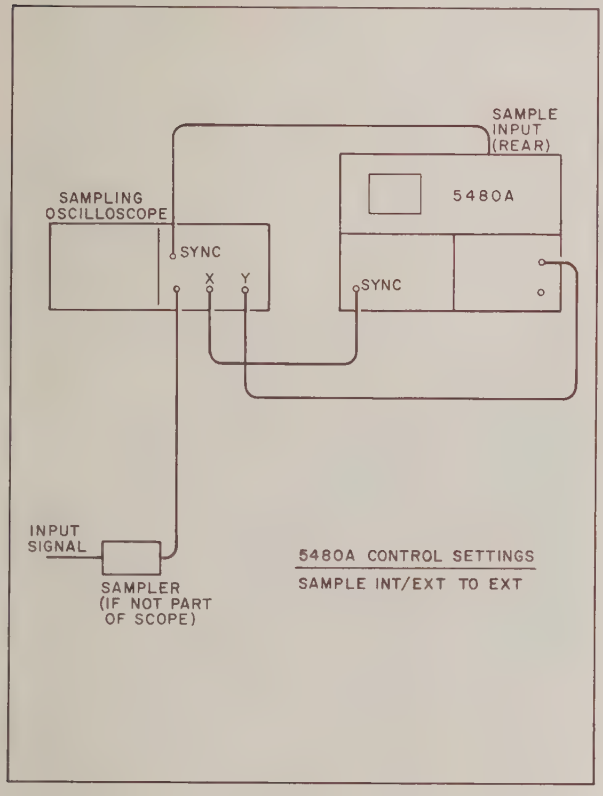

Figure 2-3. Connection of X-Y Display, Recorder, or Oscilloscope

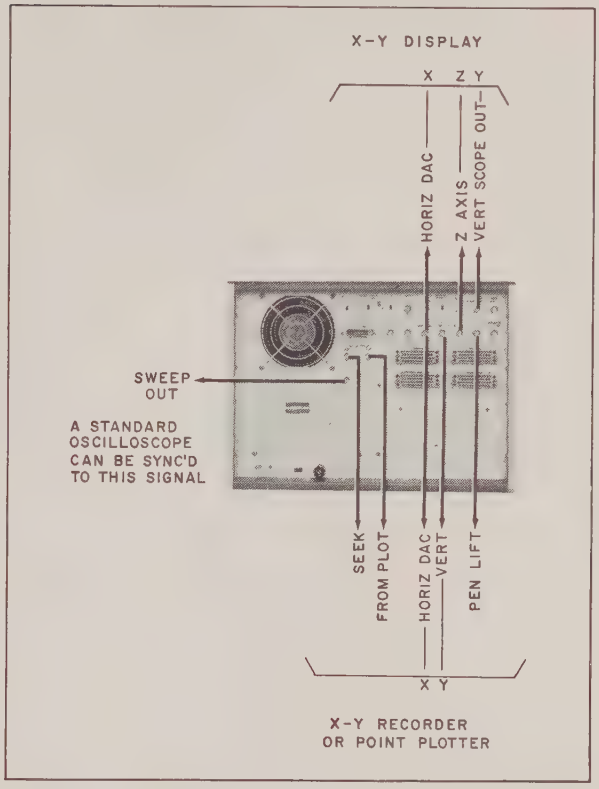

Table 2-1. Input/Output Connectors

A. MATING CONNECTORS		
Instrument Connector		Mating Connector
Reference Designator	Type (HP Part No.)	Type (HP Part No.)
J4-14, 19, 29-32	BNC Female	Standard BNC Male
J15-18	Body: Winchester MRAC 50S6 (1251-1921) Pin, female, 2-wire: Winchester 100-1016S (1251-1911) Pin, female, 1-wire: Winchester 100-1022S (1251-1909) Mtg. screws (set): Winchester J602 (1251-1911)	Body: Winchester MRAC 50P8 Pin, male: Winchester 100-1022P (1251-1908) Hood: Winchester 45-50H33/ES69 (1251-1922) Shell: Winchester XMRE 50-1000 (1251-1924) Mating Cable: (05495-60038)
J20	Connector: Power, 3-pin male (1251-0148)	Power cord (8120-0078)
A1J1	Connector: banana, female (1251-0463)	Connector: banana, male

Table 2-1. Input/Output Connectors Cont'd.

B. CONNECTOR WIRING

Connector	Signal Name	Signal Description
J4	SAMPLE INPUT	Frequency: < 20 kHz pulses, L = 0 V or more negative, H = +2 V or more positive.
J5	SAMPLE OUTPUT	Sample pulses, 1000 pulses per sweep. L = +0.4V or more negative, H = +2.5 V or more positive.
J6	NOISE OUTPUT	Train of voltage pulses whose amplitude equals difference between INPUT and AVERAGE. Amplitude is proportional to CRT display of NOISE (0.5 V per cm of deflection). Can be gated with Z-AXIS OUTPUT.
J7	NEG SYNCH OUTPUT	Negative pulse at start of each sweep (before PRE-ANALYSIS DELAY). Level: -12 V; Width: > 0.5 μsec.
J8	POS SYNCH OUTPUT	Positive pulse at start of each sweep (before PRE-ANALYSIS DELAY). Level: +12 V; Width: > 0.5 μsec.
J9	HORIZ DAC OUTPUT	Sweep ramp. 0 V to +10 V; 0.2% linearity.
J10	VERT DAC OUTPUT	-4 V to +4 V, proportional to CRT display (0.5 V per cm deflection); 0.2% linearity.
J11	Z AXIS OUTPUT	+5 V blanking pulses (can be used to gate NOISE OUTPUT).
J12	EXTERNAL DATA INPUT	
J12(1-12)	Not used	
J12(13-24)	Not used	
J13	POINT PLOTTER SEEK	Positive pulse tells Point Plotter to seek a null. Level: +10 V; Width: > 50 μsec.
J14	POINT PLOTTER PLOT	Positive pulse from Point Plotter indicates plot is complete. Level: > +2 V; Width: 200 nsec.

J15-J18, SYSTEM LOGIC INTERCONNECTION

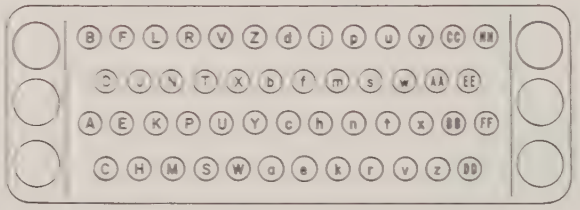

J15-J18 NOTES:

H = +2.5 V or more positive voltage level
L = +0.4 V or more negative voltage level

A = voltage step from L to H (positive step)
B = voltage step from H to L (negative step)

N = negative pulse, 200 nsec wide (H to L to H)
P = positive pulse, 200 nsec wide (L to H to L)

LE = trigger (clock) on leading edge of pulse
TE = trigger (clock) on trailing edge of pulse

Table 2-1. Input/Output Connectors Cont'd.

Connector	Signal Name	Description*
J15 SYSTEM LOGIC INTERCONNECTION A		
J15(A)	Not used	
J15(B)	Not used	
J15(C)	$\overline{\text{CYCLE}}$	N, LE
J15(D)	EN SHIFT IN	N, LE
J15(E)	SET VERT	L = TRUE
J15(F)	$\overline{\text{CLEAR 1}}$	L = TRUE
J15(H)	$\overline{\text{SHIFT 1}}$	N, LE
J15(J)	Not used	
J15(K)	Not used	
J15(L)	Not used	
J15(M)	EXT AR 0	L = TRUE
J15(N)	SHIFT PAR A	N, LE
J15(P)	EN C UP 20 MHz	L = TRUE
J15(R)	EN C DN 20 MHz	L = TRUE
J15(S)	EXT AR 1	L = TRUE
J15(T)	CLEAR PAR A	N, LE
J15(U)	SET DAR	
J15(V)	$\overline{\text{SET HORIZ}}$	N, LE
J15(W)	EXT AR 2	L = TRUE
J15(X)	$\overline{\text{READ}}$	N, LE
J15(Y)	$\overline{\text{WRITE}}$	N, LE
J15(Z)	Not used	
J15(a)	EXT AR 3	L = TRUE
J15(b)	EN SHIFT IN PAR	
J15(c)	$\overline{\text{EXT PREP}}$	N, LE
J15(d)	$\overline{\text{EXT AVE}}$	N, LE
J15(e)	EXT AR 4	L = TRUE
J15(f)	Not used	
J15(h)	$\overline{\text{SET L DISPLAY}}$	Output, N, LE
J15(j)	START ADC	Output, L = TRUE
J15(k)	EXT AR 5	L = TRUE
J15(m)	Not used	
J15(n)	CS ATTACHED	L = TRUE
J15(p)	L STOP	Output, L = TRUE
J15(r)	EXT AR 6	L = TRUE
J15(s)	Not used	
J15(t)	Not used	
J15(u)	Not used	
J15(v)	EXT AR 7	L = TRUE
J15(w)	Not used	
J15(x)	Not used	
J15(y)	Not used	
J15(z)	EXT AR 8	L = TRUE
J15(AA)	ENABLE PAR TO HOLD	
J15(BB)	Not used	
J15(CC)	Not used	
J15(DD)	EXT AR 9	L = TRUE
J15(EE)	Not used	
J15(FF)	GRD	
J15(HH)	GRD	

Connector	Signal Name	Description *
J16 SYSTEM LOGIC INTERCONNECTION B		
J16(A)	EN SHIFT LEFT	N, LE
J16(B)	EN SHIFT RIGHT	N, LE
J16(C)	ENABLE COUNT	N, LE
J16(D)	EN SHIFT IN	N, LE
J16(E)	EN OPEN LOOP	N, LE
J16(F)	$\overline{\text{CLEAR 1}}$	L = TRUE
J16(H)	$\overline{\text{SHIFT 1}}$	N, LE
J16(J)	EN C UP A	N, TE
J16(K)	EN C DN A	N, TE
J16(L)	EN SHIFT RT PAR	N, LE
J16(M)	EN COUNT PAR	N, LE
J16(N)	SHIFT PAR A	N, LE
J16(P)	ADVANCE PAR +1	N, TE
J16(R)	ADVANCE PAR -1	N, TE
J16(S)	EN DAR TO PAR	N, LE
J16(T)	CLEAR PAR A	N, LE
J16(U)	SET DAR	
J16(V)	$\overline{\text{SET HORIZ}}$	N, LE
J16(W)	MOD HOLD	N, TE
J16(X)	$\overline{\text{READ}}$	N, LE
J16(Y)	$\overline{\text{WRITE}}$	N, LE
J16(Z)	$\overline{\text{AR 9}}$	Output, L = TRUE
J16(a)	$\overline{\text{PAR 0}}$	Output, L = TRUE
J16(b)	SHIFT RT PAR C	L = TRUE
J16(c)	$\overline{\text{SAAR 0}}$	L = TRUE
J16(d)	$\overline{\text{SBAR 0}}$	L = TRUE
J16(e)	$\overline{\text{SBAR 1}}$	L = TRUE
J16(f)	$\overline{\text{SAAR 1}}$	L = TRUE
J16(h)	$\overline{\text{AR 0}}$	Output, L = TRUE
J16(j)	$\overline{\text{AR 1}}$	Output, L = TRUE
J16(k)	MAIN SRQ	L = TRUE
J16(m)	SUB SRQ	L = TRUE
J16(n)	MBSL	Output; L = TRUE
J16(p)	$\overline{\text{OUTPUT MPX}}$	Output, L = TRUE
J16(r)	$\overline{\text{L DISPLAY}}$	Output, L = TRUE

* SEE J15-J18 NOTES.

Table 2-1. Input/Output Connectors Cont'd.

Connector	Signal Name	Description*
J16(s)	CHANNEL COMMAND	L = TRUE
J16(t)	+5 volts	Output
J16(u)	$\overline{\text{SAAR 2}}$	L = TRUE
J16(v)	$\overline{\text{SAAR 3}}$	L = TRUE
J16(w)	ADVANCE PAR +4	L = TRUE
J16(x)	ADVANCE PAR +2	L = TRUE
J16(y)	INTENSITY MOD	L = TRUE
J16(z)	START PBM	L = TRUE
J16(AA)	ENABLE PAR TO HOLD	
J16(BB)	STOP PBM	L = TRUE
J16(CC)	DISPLAY PBM	L = TRUE
J16(DD)	RECORD PBM	L = TRUE
J16(EE)	CLEAR DISPLAY	L = TRUE
J16(FF)	GRD	
J16(HH)	GRD	

J17, J18 SYSTEM INTERCONNECTION C1, C2. These connectors are wired in parallel. Signal appears at indicated pin of either connector.

A	$\overline{\text{EXT AC 0}}$	L = TRUE
B	AC 0	Output, H = TRUE
C	$\overline{\text{EXT AC 12}}$	L = TRUE
D	AC 12	Output, H = TRUE
E	$\overline{\text{EXT AC 1}}$	L = TRUE
F	AC 1	Output, H = TRUE
H	$\overline{\text{EXT AC 13}}$	L = TRUE
J	AC 13	Output, H = TRUE
K	$\overline{\text{EXT AC 2}}$	L = TRUE
L	AC 2	Output, H = TRUE
M	$\overline{\text{EXT AC 14}}$	L = TRUE
N	AC 14	Output, H = TRUE
P	$\overline{\text{EXT AC 3}}$	L = TRUE
R	AC 3	Output, H = TRUE
S	$\overline{\text{EXT AC 15}}$	L = TRUE
T	AC 15	Output, H = TRUE
U	$\overline{\text{EXT AC 4}}$	L = TRUE
V	AC 4	Output, H = TRUE
W	$\overline{\text{EXT AC 16}}$	L = TRUE
X	AC 16	Output, H = TRUE
Y	$\overline{\text{EXT AC 5}}$	L = TRUE
Z	AC 5	Output, H = TRUE
a	$\overline{\text{EXT AC 17}}$	L = TRUE
b	AC 17	Output, H = TRUE
c	$\overline{\text{EXT AC 6}}$	L = TRUE
d	AC 6	Output, H = TRUE
e	$\overline{\text{EXT AC 18}}$	L = TRUE
f	AC 18	Output, H = TRUE
h	$\overline{\text{EXT AC 7}}$	L = TRUE
j	AC 7	Output, H = TRUE
k	$\overline{\text{EXT AC 19}}$	L = TRUE
m	AC 19	Output, H = TRUE
n	$\overline{\text{EXT AC 8}}$	L = TRUE
p	AC 8	Output, H = TRUE
r	$\overline{\text{EXT AC 20}}$	L = TRUE
s	AC 20	Output, L = TRUE
t	$\overline{\text{EXT AC 9}}$	L = TRUE
u	AC 9	Output, H = TRUE
v	$\overline{\text{EXT AC 21}}$	L = TRUE
w	AC 21	Output, H = TRUE
x	$\overline{\text{EXT AC 10}}$	L = TRUE
y	AC 10	Output, H = TRUE
z	$\overline{\text{EXT AC 22}}$	L = TRUE
AA	AC 22	Output, H = TRUE
BB	$\overline{\text{EXT AC 11}}$	L = TRUE
CC	AC 11	Output, H = TRUE
DD	$\overline{\text{EXT AC 23}}$	L = TRUE
EE	AC 23	Output, H = TRUE
FF	GRD	
HH	GRD	

* SEE J15-J18 NOTES.

Table 2-1. Input/Output Connectors Cont'd.

Connector	Signal Name	Signal Description
J19	SWEEP VOLTAGE OUTPUT	Sweep ramp, 0 V to +1 V (0 V to any value < +10 V obtainable by changing internal resistor).
J20	AC POWER	AC power input 115 or 230 V.
J29	VERTICAL SCOPE OUTPUT	-5 V to +5 V, proportional to CRT display. Analog Plug-in (API) POSITION control determines dc offset of this signal.
J30	PEN LIFT CONTROL	Output, +5 V = Pen UP; 0 V = Pen DOWN
J31	MCS INPUT	Signal input for MCS FUNCTION. Pulses; amplitude between 2 V and 20 V; max rep rate 1 MHz; min width 500 nsec; pulse pair resolution 500 nsec; input impedance 3 K ohms minimum.
J32	VARIANCE OUTPUT	Square of noise signal available only when variance option installed in API (5485A Option 01).
A1J1	CALIBRATOR	Square wave, 1 V p-p. Frequency depends on LPI SWEEP TIME setting.

Table 2-2. Incoming Inspection Check

This table lists equipment and methods required to perform an incoming inspection check of the Model 5480A Signal Analyzer. Before beginning the check, refer to Section III of this manual for a discussion of operating controls for the 5480A Memory/Display unit and its two plug-ins.

This table is organized in three sections:

A. Test equipment required, with recommended Hewlett-Packard instruments listed.

B. Procedure, describing tests.

C. Test record, which provides a place to record the results of each test. The test record may be kept as a reference against which later performance checks can be compared.

A. TEST EQUIPMENT REQUIRED

Type/Characteristics	Recommended HP Instrument (other equipment may be used, if it has required characteristics)
Electronic Counter	Model 5221B
Voltage Standard DC: Output voltage range +20 mV to +20 V AC: Output voltage range 0.5 V to 20 V peak-to-peak	Model 740B or 741B Model 745A (Note: Model 738AR Voltmeter Calibrator may be used. Model 738BR Voltmeter Calibrator may be used, except change test voltages that are multiples of "2" to multiples of "1.5".)
Oscilloscope Vertical Sensitivity: 5 V/cm Sweep Speeds: 1 μsec/cm to 100 msec/cm Intensity modulation capability	Model 180A with Model 1801A Dual Channel Vertical Amplifier and Model 1820 Time Base plug-ins
Pulse Generator Repetition rate 1K to 1M Pulse width 0.5 μsec Positive polarity Amplitude 2V	Model 222A
Strip Chart Recorder	Model 680

B. PROCEDURE

1. Before turn-on, set Signal Analyzer System controls as follows:

FUNCTION to AVERAGE
TRIGGER SOURCE to INTERNAL
PRE-ANALYSIS DELAY to "0"
POST-ANALYSIS DELAY to OFF
SWEEP NUMBER to "0"
PRESET/NORMAL to NORMAL
SWEEP TIME to 1 sec/cm
SENSITIVITY MULTIPLIER to AUTO
PRESET TOTALIZER to OFF
MAGNIFIER to X1
SCALE CAL to OFF
SAMPLE to INT
DISPLAY INTERLACE to IN
SAWTOOTH/TRIANGLE to SAWTOOTH
A DISPLAY to DATA
B DISPLAY to DATA
A MEMORY SELECTOR to HALF 3,4

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

1. Set controls as follows (Cont'd):

   B MEMORY SELECTOR to HALF 1,2
   A+B/ALT to ALT
   HISTOGRAM to OFF
   A SENSITIVITY to .005 V/CM
   B SENSITIVITY to .005 V/CM
   A SENSITIVITY VERNIER to CAL
   B SENSITIVITY VERNIER to CAL
   A POLARITY to UP+
   B POLARITY to UP+
   A AC/GND/DC to GND
   B AC/GND/DC to GND

2. Check for correct line fuse and line voltage switch setting (see item 16, Figure 3-3), then connect Signal Analyzer System to ac line and turn on POWER.

   Observe that:
   POWER lamp is lighted
   RESET lamp is off
   PROCESS STOP pushbutton is lighted

3. Press both CLEAR DISPLAY pushbuttons. Observe that OUTPUT DISPLAY pushbutton lights, and two traces appear on CRT.

4. Adjust A POSITION. Observe that one trace moves across entire vertical range of CRT graticule.

5. Adjust B POSITION. Observe that other trace moves across entire range of CRT graticule.

6. Set Channel A trace on top graticule line. Set Channel B trace on bottom graticule line. Observe trace widths. Adjust FOCUS for best traces. Traces should be less than 0.2 cm wide.

7. Switch MAGNIFIER to X5. Observe that each trace has approximately 10 dots per cm.

8. Adjust HORIZONTAL POSITION. Observe both ends of traces as position control is moved from one extreme to the other.

9. Switch Channel A MEMORY SELECTOR to QUARTERS 1, 2, 3, and 4. Observe that Channel A trace has approximately 5 dots per cm for each quarter.

10. Switch Channel A DISPLAY to OFF. Switch Channel B MEMORY SELECTOR to QUARTERS 1, 2, 3, and 4. Observe that Channel B trace has approximately 5 dots per cm for each quarter. Channel A trace should not be present.

11. Set controls as follows:
    A DISPLAY to DATA
    A MEMORY SELECTOR to FULL
    B MEMORY SELECTOR to FULL
    MAGNIFIER to X1
    A+B/ALT to A+B
    Press both CLEAR DISPLAY buttons
    Press PROCESS START pushbutton

    Observe trace. If trace contains a moving offset, adjust DC BAL A+B to minimize offset. To check adjustment, press both CLEAR DISPLAY pushbuttons, then PROCESS START pushbutton; observe moving offset, and repeat adjustment if necessary.

12. Press both CLEAR DISPLAY pushbuttons, then PROCESS START. Switch Channel A POLARITY alternately between UP+ and -UP. Observe trace. Offsets associated with polarity switching should be less than 0.2 cm.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

13. Press both CLEAR DISPLAY pushbuttons, then PROCESS START. Switch Channel B POLARITY alternately between UP+ and -UP. Observe trace. Offsets associated with polarity switching should be less than 0.2 cm.

14. Switch A+B/ALT to ALT. Press both CLEAR DISPLAY pushbuttons, then PROCESS START. Observe trace. If trace contains a moving offset, adjust Channel A DC BAL for minimum offset. To check adjustment, press both CLEAR DISPLAY pushbuttons, then PROCESS START pushbutton; observe moving offset, and repeat adjustment if necessary.

15. Switch Channel A DISPLAY to OFF. Press both CLEAR DISPLAY pushbuttons, then PROCESS START. Observe trace. If trace contains a moving offset, adjust Channel B DC BAL for minimum offset. To check adjustment, press both CLEAR DISPLAY pushbuttons, then PROCESS START pushbutton; observe moving offset, and repeat adjustment if necessary.

16. Press OUTPUT DISPLAY. Switch SENSITIVITY MULTIPLIER to "0", then in sequence through 1, 2, 3, 4, 5, 6, 7, etc. Observe trace. There should be no change switching between AUTO and "0". As SENSITIVITY MULTIPLIER is stepped to each higher-numbered position, vertical spacing between dots of trace doubles.

17. Set controls as follows:
    SENSITIVITY MULTIPLIER to AUTO
    SWEEP TIME to 10 msec/cm
    INTERLACE DISPLAY to OUT
    Press PROCESS START

    Observe trace. Trace should flicker.

18. Switch SWEEP TIME through each position from 10 msec/cm to 50 sec/cm. Observe trace. With each successive switch position, trace should flicker at a slower rate until display is a dot slowly moving across CRT.

19. Switch SWEEP TIME to 1 msec/cm. Set PRE-ANALYSIS DELAY to 0.5 sec. Observe trace. Flicker rate should be about two times per second.

20. Switch PRE-ANALYSIS DELAY to 0.2 sec, 0.1 sec, 50 msec, and 20 msec. Observe trace. Flicker rate should increase as PRE-ANALYSIS DELAY decreases.

21. Switch PRE-ANALYSIS DELAY to 10 msec and 5 msec. Observe trace. Trace should brighten at each of these PRE-ANALYSIS times.

22. Set PRE-ANALYSIS DELAY to "0". Set POST-ANALYSIS DELAY to any position out of "OFF". Observe trace. Flicker rate depends on setting of POST-ANALYSIS DELAY.

23. Switch TRIGGER SOURCE to LINE. Observe trace. Flicker rate depends on POST-ANALYSIS DELAY setting.

24. Set controls as follows:
    POST-ANALYSIS DELAY to OFF
    SWEEP NUMBER to "0"
    PRESET/NORMAL to NORMAL
    Press PROCESS START pushbutton

    Connect a BNC-BNC cable between Electronic Counter INPUT and 5480A rear-panel NEG SYNCH OUTPUT.

    Set Electronic Counter as follows:
    GATE to OPEN
    SAMPLE RATE to mid-range
    TRIGGER LEVEL for uniform counting rate.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

24. Continued.

Switch SWEEP NUMBER to PRESET.
Press both CLEAR DISPLAY pushbuttons
Reset Electronic Counter
Press PROCESS START button

Observe 5480A and Electronic Counter. Signal Analyzer should provide one sweep, and OUTPUT DISPLAY button should light. Electronic Counter should indicate "1" sweep.

25. Perform the following procedure for SWEEP NUMBER settings indicated:

Set SWEEP NUMBER switch as indicated.
Reset Electronic Counter
Press PROCESS START button
Allow Signal Analyzer to sweep until OUTPUT DISPLAY lamp lights.

Observe Electronic Counter display. Number of sweeps should correspond to selected SWEEP NUMBER as shown in table below.

SWEEP NUMBER	Number of sweeps
1	2
2	4
3	8
4	16
5	32
6	64
7	128
8	256
9	512
10	1024

Disconnect Electronic Counter from 5480A.

26. Connect equipment as shown in setup diagram below.

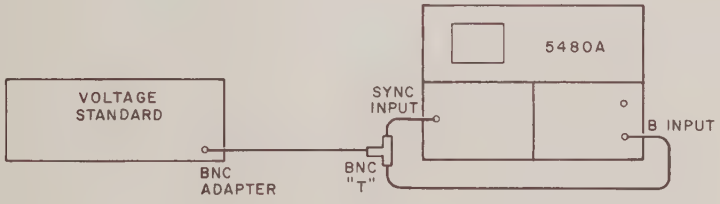

Center Channel B trace
Switch Channel B AC/GND/DC to DC
Set Voltmeter Calibrator for +20 mV dc output

Observe trace. At 5 mV/cm, trace should move to within 0.2 cm of top graticule line.

27. Switch Channel B POLARITY to -UP. Observe trace. Trace should move to within 0.2 cm of bottom graticule line.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

28. Switch Channel B SENSITIVITY to .01 V/CM, .02 V/CM, and .05 V/CM. Observe trace. Displacement from center should correspond to SENSITIVITY setting as shown in chart below, within 0.2 cm.

SENSITIVITY (V/CM)	Trace is _____ cm below center (±0.2 cm)
.01	2 cm
.02	1 cm
.05	0.4 cm

29. Change control settings as follows:

    Voltage Standard to provide 400 Hz at 0.5 V peak-to-peak
    Channel B SENSITIVITY to 0.1 V/CM
    TRIGGER SOURCE to EXTERNAL +
    Adjust TRIGGER SOURCE LEVEL for stable triggering

    Observe trace. Pattern should be stable sine wave, 5 ±0.2 cm in height.

30. Adjust Channel B SENSITIVITY VERNIER. Observe trace. Vernier should reduce height of displayed signal to less than 2 cm when turned fully CCW. Set B SENSITIVITY VERNIER to CAL.

31. Switch Channel B SENSITIVITY and Voltmeter Calibrator output as indicated in table below. Observe trace. Display size at each setting should be within 0.2 cm of size indicated in table.

DC Voltage Standard Output	SENSITIVITY (V/CM)	Display Size (cm)
0.5V	0.2	2.5
0.5V	0.5	1
1V	1	1
2V	2	1
5V	5	1
10V	10	1
20V	20	1

32. Switch Channel A DISPLAY to DATA and repeat steps 26 through 31 for Channel A.

33. Switch PRE-ANALYSIS DELAY to 20 μs, 50 μs, .1 ms, .2 ms, .5 ms, 1 ms, and 2 ms. Observe trace. Initial phase of displayed sine wave should change as switch settings are changed.

34. Switch TRIGGER SOURCE to EXTERNAL. Observe trace. Phase of displayed sine wave should reverse.

35. Set controls as follows:

    PRE-ANALYSIS DELAY to "0"
    SWEEP TIME to 5 msec/cm
    FUNCTION to SUMMATION
    SWEEP NUMBER to "4"
    PRESET/NORMAL to PRESET
    Press both CLEAR DISPLAY pushbuttons
    Press PROCESS START button

    Observe trace. Sine wave pattern should grow, divide by 2, grow, divide by 2, for a total of four divisions by 2.

36. Switch SENSITIVITY MULTIPLIER to 10. Observe trace. Sine wave displayed should be 0.5 ±0.2 cm in amplitude.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

37. Switch SENSITIVITY MULTIPLIER to 11, 12, 13, 14, 15. Observe trace. Amplitude of displayed sine wave should double with each successive switch position. Note: there may be a small amount of overflow on position 15. Overflow causes displayed pattern to appear folded-over at top or bottom.

38. Set controls as follows:
    SENSITIVITY MULTIPLIER to AUTO
    SWEEP NUMBER to 19
    Channel A DISPLAY to INPUT
    Press both CLEAR DISPLAY pushbuttons
    Press PROCESS START button

    Observe trace. Should be flickering sine wave.

39. Switch Channel A DISPLAY to NOISE. Observe trace. Should be flickering sine wave, same as in step 38.

40. Switch SWEEP TIME to 10 msec/cm. Observe trace. Flicker is half rate of step 39.

41. Set controls as follows:
    FUNCTION to AVERAGE
    Channel A SENSITIVITY to 0.5 V/CM
    Channel A DISPLAY to DATA
    SWEEP TIME to 2 msec/cm
    Channel A SENSITIVITY VERNIER to fully CCW
    Press both CLEAR DISPLAY pushbuttons
    Press PROCESS START button

    Observe trace. Should be clipped sine wave with no "rain". "Rain" is many dots moving randomly up or down in the CRT display.

42. For the remaining checks of this procedure, an external oscilloscope is used to observe Signal Analyzer output waveforms. Initially, the oscilloscope controls should be set as follows:

    Time/cm to 1 μsec/cm
    Vertical sensitivity to 5 V/CM
    AC/DC coupling to DC
    SYNC to internal

43. Connect oscilloscope to 5480A rear-panel POS SYNCH OUTPUT.

    Set 5486A TRIGGER SOURCE to INT
    Press both CLEAR DISPLAY pushbuttons
    Press PROCESS START button

    Observe oscilloscope. Display should be positive-going pulse as shown in waveform A.

44. Disconnect oscilloscope from POS SYNCH OUTPUT and connect to NEG SYNCH OUTPUT. Observe oscilloscope. Display should be negative-going pulse as shown in waveform B.

45. Disconnect oscilloscope from NEG SYNCH OUTPUT and connect to SAMPLE OUTPUT. Observe oscilloscope. Display should be negative-going pulse as shown in waveform C.

46. Disconnect oscilloscope from SAMPLE OUTPUT and connect to Z AXIS OUTPUT. Observe oscilloscope. Display should be negative-going pulse as shown in waveform D.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd. OSCILLOGRAMS

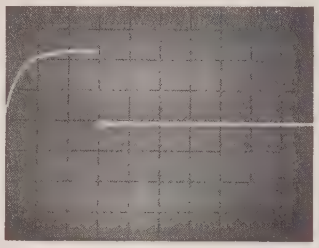

1. V = 5V/cm
H = 0.5 μsec/cm
0V = vertical centerline

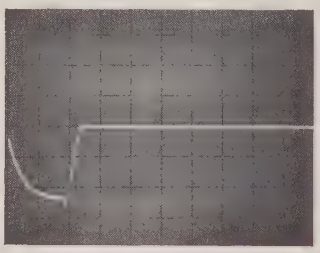

2. V = 5V/cm
H = 0.5 μsec/cm
0V = vertical centerline

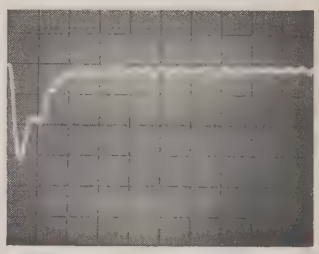

3. V = 2V/cm
H = 0.1 μsec/cm
0V = vertical centerline

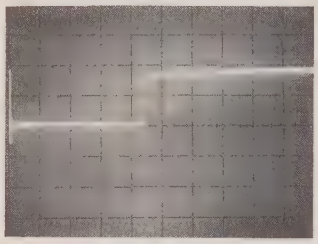

4. V = 2V/cm
H = 1 μsec/cm
0V = vertical centerline

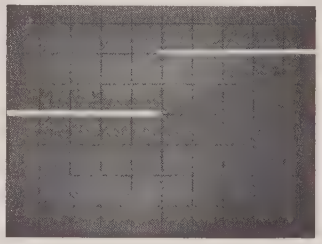

5. V = 2V/cm
H = 2 msec/cm
0V = vertical centerline

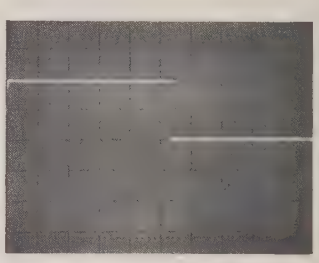

6. V = 5V/cm
H = 20 μsec/cm
0V = vertical centerline

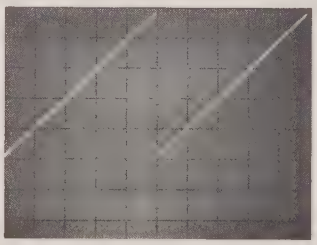

7. V = 1V/cm
H = 1 sec/cm
0V = 1 cm below vertical centerline

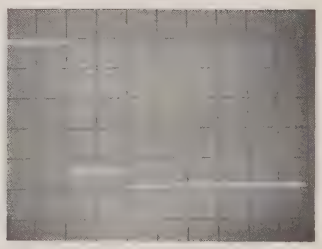

8. V = 20 kHz/cm
H = 10 sec/cm
0 counts = baseline
SENSITIVITY MULTIPLIER set to 9

47. Disconnect oscilloscope from Z AXIS OUTPUT and connect to PEN LIFT CONTROL.

Change oscilloscope time/cm to 5 msec/cm
Press both CLEAR DISPLAY buttons
Press OUTPUT RECORD button, repeat as many times as desired.

Observe oscilloscope. Display should be negative-going pulse as shown in waveform E. Pulse occurs each time OUTPUT RECORD button is pressed.

48. Disconnect oscilloscope from PEN LIFT CONTROL and connect to POINT PLOTTER SEEK.

Change oscilloscope time/cm to 20 μsec/cm
Change 5480A SWEEP TIME to 100 msec/cm
Press OUTPUT RECORD button. Repeat as necessary.

Observe oscilloscope. Positive pulse occurs during time OUTPUT RECORD button is lighted. OUTPUT RECORD stays lighted for about 1 second (10 times SWEEP TIME setting). Pulse should resemble one shown in waveform F. Disconnect oscilloscope from POINT PLOTTER SEEK output.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

49. Connect Pulse Generator OUTPUT to POINT PLOTTER PLOT input. Set Pulse Generator controls as follows:

REP RATE to 1K-10K
REP RATE VERNIER to fully CCW
PULSE DELAY to less than 0.1
PULSE WIDTH to 0.5-5
PULSE WIDTH VERNIER to fully CCW
PULSE POLARITY to "+"
PULSE AMPLITUDE to 2V
PULSE AMPLITUDE VERNIER fully CCW

Set 5480A controls as follows:
SAMPLE INT/EXT to EXT
SWEEP TIME to EXT
Push OUTPUT RECORD button

Observe 5480A CRT. Dot moves across CRT. PROCESS STOP button lights about 1 to 2 seconds after OUTPUT RECORD button is pressed. Disconnect Pulse Generator from POINT PLOTTER PLOT input.

50. Connect Pulse Generator to SAMPLE INPUT. Press both CLEAR DISPLAY pushbuttons. Press PROCESS START button. Observe CRT. Dot sweeps across CRT in about 1 to 2 seconds. Disconnect Pulse Generator from SAMPLE INPUT.

51. Connect Pulse Generator to MCS INPUT. Change Pulse Generator REP RATE to 100K-1M. Set 5480A controls as follows:

SAMPLE INT/EXT to EXT
SWEEP TIME to 1 sec/cm
FUNCTION to MCS
SENSITIVITY MULTIPLIER to 7
Press both CLEAR DISPLAY pushbuttons
Press PROCESS START button

After about 1 second, change Pulse Generator REP RATE to 10K-100K. After about 1 more second, push PROCESS STOP. Press DISPLAY. Observe CRT. Disregard scattered points. If two-step picture, similar to one shown in waveform G, appears, MCS works. Disconnect all signal leads from 5480A rear-panel.

52. Connect oscilloscope as shown in picture below.

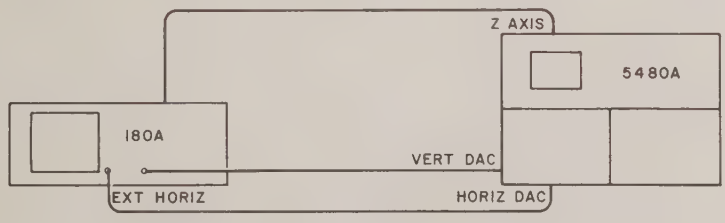

Set oscilloscope controls as follows:
DISPLAY to EXT CAL
Vertical Sensitivity to 0.5 V/cm
Adjust Horizontal and Vertical position controls as necessary for on-screen display.

Observe waveforms on Signal Analyzer and oscilloscope. They should be similar. Adjust Horizontal and Vertical gain sensitivities to give same Horizontal and Vertical deflections on oscilloscope as on Signal Analyzer. Oscilloscope trace should be twice as wide as Signal Analyzer trace. NOTE: Be sure oscilloscope intensity control is not turned up so high that it overrides Z axis input voltage.

Table 2-2. Incoming Inspection Check Cont'd.

B. PROCEDURE Cont'd.

53. Disconnect oscilloscope from VERTICAL DAC OUTPUT and connect to VERTICAL SCOPE OUTPUT. Adjust Signal Analyzer Vertical POSITION control. Observe oscilloscope trace. Trace should move up and down as Signal Analyzer trace moves up and down.

54. Set controls as follows:
    FUNCTION to HISTOGRAM
    HISTOGRAM to TIME
    SWEEP TIME to 1 msec/cm
    SENSITIVITY MULTIPLIER to 15
    Press both CLEAR DISPLAY pushbuttons
    Press PROCESS START button

    Observe 5480A CRT. One to three dots should rise out of baseline approximately 2.5 cm from left-hand side.

55. Switch HISTOGRAM to FREQ, and SWEEP TIME to 5 sec/cm. Press both CLEAR DISPLAY pushbuttons. Press PROCESS START button. Observe 5480A CRT. One to three dots will slowly rise about 0.2 cm from left-hand end of baseline.

56. Connect Strip Chart Recorder to 5480A SWEEP VOLTAGE OUTPUT. Set recorder as follows:
    RANGE to 1V
    DCN to DOWN
    Division to "8"
    Min/Hr to Min
    Zero pen while holding 5480A OUTPUT RECORD button in.

    Set Signal Analyzer controls as follows:
    INTERLACE DISPLAY to OUT
    PRESET/NORMAL to NORMAL
    Press PROCESS START

    Observe strip chart recording. Should show a ramp as in picture H.

Table 2-2. Incoming Inspection Check Cont'd.

C. TEST RECORD

HP Model 5480A Signal Analyzer System — Tests performed by _____

HP Model 5480A Memory/Display — Date _____
Serial No. ____ - _____ Other ID _____

HP Model 5485A Dual Channel Input
Serial No. ____ - _____ Other ID _____

HP Model 5486A Control
Serial No. ____ - _____ Other ID _____

Step*	Description	Test Result
* Step refers to number in part B, PROCEDURE		
1.	Initial Control Settings	
2.	Turn-on	POWER lamp _____ RESET lamp _____ PROCESS STOP button _____
3.	CLEAR DISPLAY	OUTPUT DISPLAY button _____ CRT Display _____
4.	Channel A POSITION	One trace moves _____
5.	Channel B POSITION	Other trace moves _____
6.	Trace widths	Less than 0.2 cm _____
7.	MAGNIFIER to X5	10 dots/cm A _____ B _____
8.	HORIZONTAL POSITION	See both ends of trace _____
9.	Channel A MEMORY SELECTOR	QUARTER 1 _____ 2 _____ 3 _____ 4 _____
10.	Channel B MEMORY SELECTOR	QUARTER 1 _____ 2 _____ 3 _____ 4 _____
11.	DC BAL A+B	Minimal offset _____
12.	Channel A POLARITY reversal	Minimal offset _____
13.	Channel B POLARITY reversal	Minimal offset _____
14.	DC BAL A	Minimal offset _____
15.	DC BAL B	Minimal offset _____
16.	SENSITIVITY MULTIPLIER	No change in size switching between AUTO and "0" _____

Table 2-2. Incoming Inspection Check Cont'd.

C. TEST RECORD Cont'd.

16.	SENSITIVITY MULTIPLIER Cont'd.	Vertical spacing between dots changes by factor of 2 when switching between following positions 0-1 _____ 10-11 _____ 1-2 _____ 11-12 _____ 2-3 _____ 12-13 _____ 3-4 _____ 13-14 _____ 4-5 _____ 14-15 _____ 5-6 _____ 15-16 _____ 6-7 _____ 16-17 _____ 7-8 _____ 17-18 _____ 8-9 _____ 18-19 _____ 9-10 _____
17.	INTERLACE DISPLAY OUT	Trace flickers _____
18.	Increase SWEEP TIME	Observe CRT
19.	PRE-ANALYSIS DELAY 0.5 sec	Trace flicker about twice/second _____
20.	PRE-ANALYSIS DELAY 0.2 sec, 0.1 sec, 50 msec, 20 msec	Flicker rate increases _____
21.	PRE-ANALYSIS DELAY 10 ms, 5 msec	Trace brightens _____
22.	POST-ANALYSIS DELAY	Flicker rate depends on control setting _____
23.	TRIGGER SOURCE to LINE	Flicker rate depends on POST-ANALYSIS DELAY setting.
24.	SWEEP NUMBER counter	N = 0, count = 1 _____
25.	SWEEP NUMBER counter	N = 1, count = _____ N = 2, count = _____ N = 3, count = _____ N = 4, count = _____ N = 5, count = _____ N = 6, count = _____ N = 7, count = _____ N = 8, count = _____ N = 9, count = _____ N = 10, count = _____
26.	Channel B attenuator calibration	.005 V/CM _____
27.	Reverse polarity	Trace moves to bottom of CRT _____
28.	Channel B attenuator calibration	.01 V/CM _____ .02 V/CM _____ .05 V/CM _____
29.	Channel B attenuator calibration	.1 V/CM _____
30.	Channel B SENSITIVITY VERNIER	Max CCW _____

Table 2-2. Incoming Inspection Check Cont'd.

C. TEST RECORD Cont'd.

31.	Channel B attenuator calibration	.2 V/CM _____ .5 V/CM _____ 1 V/CM _____ 2 V/CM _____ 5 V/CM _____ 10 V/CM _____ 20 V/CM _____
32.	Channel A attenuator calibration	.005 V/CM _____
	Reverse polarity	Trace moves to bottom of CRT _____
	Channel A attenuator calibration	.01 V/CM _____ .02 V/CM _____ .05 V/CM _____ .1 V/CM _____
	Channel A SENSITIVITY	Max CCW _____
	Channel A attenuator calibration	.2 V/CM _____ .5 V/CM _____ 1 V/CM _____ 2 V/CM _____ 5 V/CM _____ 10 V/CM _____ 20 V/CM _____
33.	PRE-ANALYSIS DELAY	20 μsec _____ 50 μsec _____ .1 msec _____ .2 msec _____ .5 msec _____ 1 msec _____ 2 msec _____
34.	Reverse TRIGGER SOURCE EXTERNAL polarity	Initial phase of displayed sine wave reverses _____
35.	AUTO scaling in SUMMATION mode	Pattern grows, divides by 2, grows, divides, etc. _____
36.	SENSITIVITY MULTIPLIER to 10	Trace is sine wave _____
37.	SENSITIVITY MULTIPLIER to 11-15	Amplitude of sine wave changes by a factor of 2 when switching between following positions 10-11 _____ 11-12 _____ 12-13 _____ 13-14 _____ 14-15 _____
38.	Channel A DISPLAY to INPUT	Trace flickers _____
39.	Channel A DISPLAY to NOISE	Trace flickers _____
40.	Change SWEEP TIME to 10 msec	Flicker rate is half that of steps 38 and 39 _____

Table 2-2. Incoming Inspection Check Cont'd.

C. TEST RECORD Cont'd.

41.	Memory overload in AVERAGE	Display is clipped sine wave with no "rain" _____
42.	Connect oscilloscope	
43.	POS SYNCH OUTPUT	Amplitude _____ Width at base _____ Baseline _____
44.	NEG SYNCH OUTPUT	Amplitude _____ Width at base _____ Baseline _____
45.	SAMPLE OUTPUT	Amplitude _____ Width at base _____ Baseline _____
46.	Z AXIS OUTPUT	Amplitude _____ Width at base _____ Baseline _____
47.	PEN LIFT CONTROL	Amplitude _____ Width at base _____ Baseline _____
48.	POINT PLOTTER SEEK	Amplitude _____ Width at base _____ Baseline _____
49.	POINT PLOTTER PLOT	Dot on CRT _____ PROCESS STOP lights _____
50.	SAMPLE INPUT	Dot on CRT _____
51.	MCS INPUT	Two-step waveform _____
52.	External oscilloscope	VERTICAL DAC_____ HORIZ DAC_____ Z AXIS _____
53.	External oscilloscope	VERTICAL SCOPE OUTPUT _____
54.	TIME HISTOGRAM	Dot 2.5 cm from left side of trace _____
55.	FREQUENCY HISTOGRAM	Dot 0.2 cm from left side of trace _____
56.	SWEEP VOLTAGE OUTPUT	Ramp height _____ Ramp linearity _____

SECTION III

OPERATION

3-1. BASIC CONCEPT

3-2. The similarity of the 5480A Signal Analyzer System to a standard oscilloscope is apparent from some of the control names (POSITION, TRIGGER SOURCE/LEVEL, SENSITIVITY V/CM, SWEEP TIME). The 5480A is basically an oscilloscope for looking at noisy signals, and can provide up to 60 dB of improvement in signal-to-noise ratio. Further descriptions of the Signal Analyzer system are given in Figure 3-3 thru 3-5. Operating instructions for each mode are given in Figures 3-6 thru 3-10. Special operating instructions (for increasing frequency range, use with auxiliary equipment, etc, are given in Figures 2-2 and 2-3).

3-3. Figure 3-1 enables estimation of experiment length from the time PROCESS START button is pressed, until OUTPUT DISPLAY pushbutton lights at end of experiment. The chart does not include any allowance for 5480A "dead time", so actual experiment length may be up to 100 per cent longer than estimated. Any PRE-ANALYSIS DELAY or POST-ANALYSIS DELAY should be added to SWEEP TIME line and included in overall experiment length.

Figure 3-1. Time to PRESET (Nomograph)

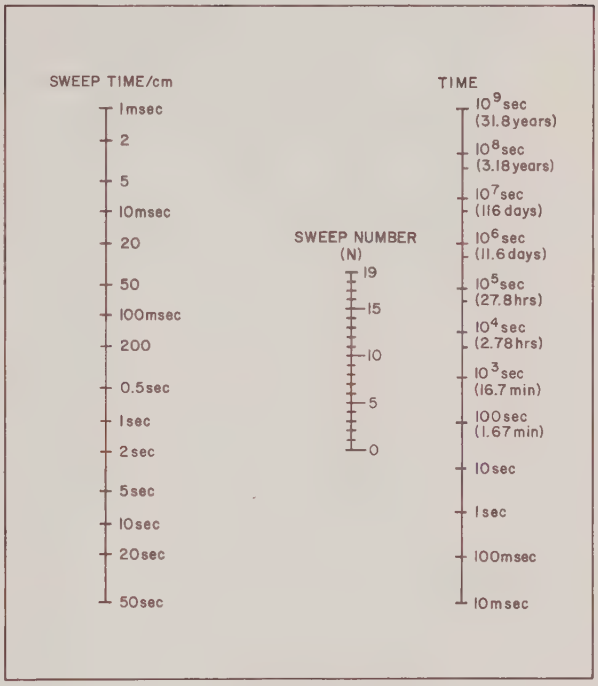

Figure 3-2. Pre-Analysis and Post-Analysis Delays

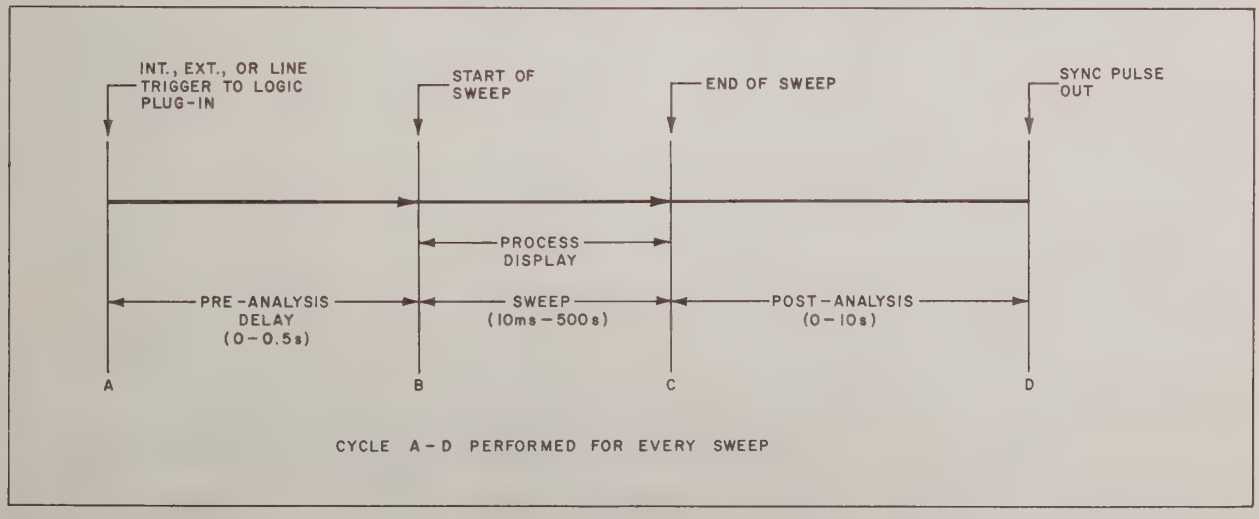

Figure 3-3. Memory-Display Unit (5480A)

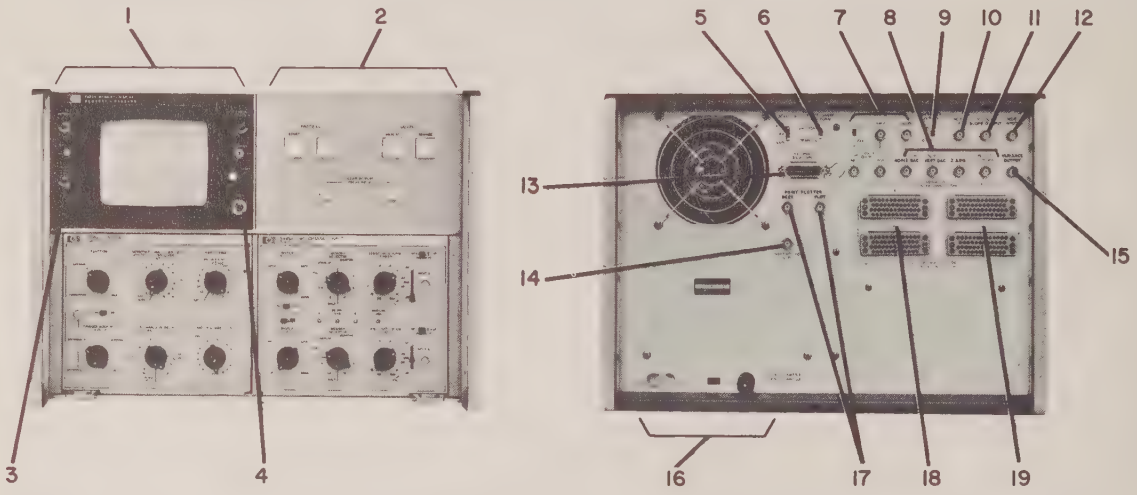

DESCRIPTION: Provides memory, logic, power supply and display output for Signal Analyzer System.

CONTROLS, CONNECTORS, INDICATORS:

FRONT PANEL:

1. DISPLAY:

   CRT: Provides visual output from 5480A. See Figures 3-7 thru 3-10 for interpretation of display.

   INTENSITY: Adjusts CRT trace intensity. Prevent CRT phosphor burns by keeping intensity as low as possible while maintaining good trace visibility.

   TRACE ALIGN: Rotates trace for alignment with graticule.

   FOCUS: Adjusts CRT focus. Set for smallest spot size.

   MAGNIFIER: Expands horizontal display scale by factor of 5 (in X5) to provide increased resolution.

2. MEMORY

   PROCESS and OUTPUT controls are pushbutton switches containing indicator lamps. Lighted button indicates Memory activity in progress.

   PROCESS START: Enables signal processing by Memory. Processing begins at first sync pulse after pushbutton is pressed. If pressed while STOP or DISPLAY button is lighted, processing resumes at next sync pulse. Button remains lighted during signal processing.

   PROCESS STOP: Stops signal processing by Memory. No CRT display.

   OUTPUT DISPLAY: Causes Memory contents to be displayed on CRT. Stops signal processing if pressed while START button is lighted.

   OUTPUT RECORD: When signal processing is stopped, causes 5480A to step through Memory contents once at rate selected by SWEEP TIME control. Memory contents are provided in analog form at rear panel OUTPUT connectors (item 8). Output signal can be recorded by X-Y recorder at rate which recorder pen can follow. (A PEN LIFT signal is also provided at rear panel.)

   CLEAR DISPLAY: Two pushbutton switches must be pressed simultaneously to erase Memory contents being displayed on CRT. Use of two buttons prevents accidental erasure of Memory contents.

3. CALIBRATOR: Female banana connector. One-volt peak-to-peak square wave. Output frequency depends on SWEEP TIME to maintain the same number of cycles on CRT display regardless of SWEEP TIME.

4. POWER

   Switch controls ac power to 5480A.

   White ON lamp lights whenever ac power is applied.

   Red RESET lamp lights to indicate that ac power has been interrupted. Memory contents are protected against ac interruption, but processing cannot continue until the interruption has been acknowledged by resetting the 5480A by turning ac power off for about one second, then on again.

Figure 3-3. Memory-Display Unit (5480A) Cont'd.

REAR PANEL:

5. SCALE CAL: Provides means for calibrating an X-Y recorder connected at OUTPUT connectors (item 8). When analog plug-in DISPLAY control is set to DATA, SCALE CAL operates as follows:

   In FULL, a dot appears at upper right corner of CRT.
   In ZERO, a dot appears at lower left corner of CRT.
   In OFF, 5480A operates normally.

6. HORIZ SWEEP WAVEFORM: Allows operator to select SAWTOOTH or TRIANGLE sweep voltage. In SAWTOOTH, Memory is stepped from 0 (left) to 1000 (right) linearly, jumps back to 0 (left) and steps linearly to 1000 (right) again. In triangle, Memory is stepped from 0 (left) to 1000 (right) linearly, then from 1000 (right) to 0 (left) linearly, then 0 (left) to 1000 (right), etc.

   SAWTOOTH gives continual left-to-right sweeps while TRIANGLE gives alternate left-to-right and right-to-left sweeps (steps through Memory).

7. SAMPLE:

   INT/EXT Switch: In INT, 5480A uses internal 100 kHz time base to establish sampling rate. In EXT, 5480A uses signal applied at SAMPLE INPUT connector to establish sampling rate.

   SAMPLE OUTPUT connector. Female BNC. One-thousand logic level sample pulses per sweep. Output available from either internal or external sweeps.

   SAMPLE INPUT connector. Female BNC. Signal applied here establishes sampling rate when INT/EXT switch set to EXT. Signal frequency must be less than 20 kHz and levels must vary from 0V or more negative to +2V or more positive.

8. OUTPUT: Female BNC connectors. Provides necessary analog outputs for driving X-Y recorder, point plotter, oscilloscope, or other analog device.

   HORIZ DAC provides 0V to +10V ramp, proportional to each Memory address.

   VERT DAC provides -5V to +5V, proportional to vertical display.

   Z AXIS provides 2V logic-level signal for oscilloscope blanking.

   PEN LIFT CONTROL provides logic level signal to drop X-Y recorder pen at start of sweep and lift pen at end of sweep.

9. INTERLACE DISPLAY: Controls display sweep.

   When set to IN, display address register sweeps memory and CRT continuously at 1 msec/cm, providing continuous flicker-free display, regardless of Logic Plug-in SWEEP TIME setting. When SWEEP VOLTAGE OUTPUT (item 14) is being used, set INTERLACE DISPLAY to OUT. This will make SWEEP VOLTAGE OUTPUT a single ramp for each triggering sync pulse.

10. NOISE OUTPUT: Female BNC connector. Provides noise being removed from data signal. Voltage level is correct for that point during time CRT is unblanked (Z AXIS OUTPUT pulse).

11. VERT SCOPE OUTPUT: Female BNC connector. Provides -5V to +5V ac signal (proportional to amplitude of displayed signal) riding on a dc offset voltage that is proportional to setting of Analog Plug-in Vertical POSITION control.

12. MCS INPUT: Female BNC connector. Signal input for MCS (multichannel scaling) made (see Figure 3-10).

13. EXTERNAL DATA INPUT: 24-pin connector. Inputs parallel data inputs from Analog Plug-in connector.

14. SWEEP VOLTAGE OUTPUT: Female BNC connector. Provides sawtooth (0 V to +1 V) signal synchronized with analyzer sweep. Set INTERLACE DISPLAY to OUT when using this connector.

15. VARIANCE OUTPUT: Female BNC connector. Provides square of noise only (variance of input signal) when variance option is installed. By observing this output on an unused 5480A input channel, operator can tell if average waveform is made up of more than one input signal locked to the input sync frequency.

16. POWER

    Connector accepts flat-connector end of HP Part No. 8120-0078 power cord.

    115/230 slide switch allows operation from either 115V or 230V ac lines. Use a narrow-blade screwdriver to slide switch so numbers indicating operating line voltage are exposed. Be sure correct fuse is installed: For 115V, use 2.5A slow-blow, HP Part No. 2110-0015. For 230V, use 1.25A slow-blow, HP Part No. 2110-0021.

17. POINT PLOTTER: Female BNC connectors.

    SEEK supplies signal telling point plotter to plot a point.

    PLOT receives signal from plotter, indicating point has been plotted.

    Point plotter X and Y inputs come from HORIZ DAC and VERT DAC OUTPUTs, respectively. Logic Plug-in SWEEP TIME switch (see Figure 3-5) must be set to EXT.

18. SYSTEM LOGIC INTERCONNECTION for Correlation Synchronizer (not currently available).

19. SYSTEM LOGIC INTERCONNECTION for I/O (Input/Output) Coupler, HP Model 5495A. The I/O coupler provides for interface connections between the Model 5480A and computer, teletype, printer, tape reader, or tape punch.

Figure 3-4. Control Plug-in (5486A)

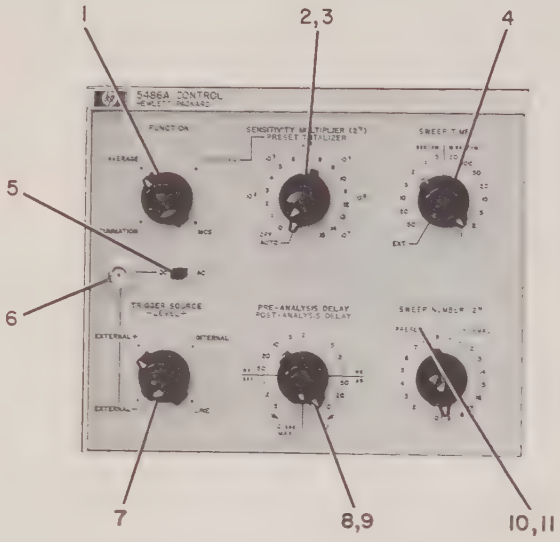

N	2^N
0	1
1	2
2	4
3	8
4	16
5	32
6	64
7	128
8	256
9	512
10	1024
11	2048
12	4096
13	8192
14	16384
15	32768
16	65536
17	131072
18	262144
19	524288

DESCRIPTION: Selects FUNCTION of Signal Analyzer System. Controls system rate, pre- and post-analysis delays, and amount of processing for each analysis.

CONTROLS, CONNECTORS:

1. FUNCTION:

   SUMMATION: Causes successive repetitions of input signal to be added, keeping a "running total". Vertical display is not calibrated (see Figure 3-8).

   AVERAGE: Keeps "calibrated average" of successive input signal repetitions. Provides continuous calibrated display (see Figure 3-7).

   HISTOGRAM: Creates plot of number-of-occurrances (probability) on vertical axis versus frequency or period on horizontal axis. Input signal is applied at input connector (item 6).

   MCS: Creates plot of frequency on vertical axis versus time on horizontal axis. Input signal is applied through MCS INPUT connector (item 12, Figure 3-3).

2. SENSITIVITY MULTIPLIER (2^N): Multiplies vertical display size by 2^N. Dial is calibrated in N, thus as control is turned clock-wise each position doubles display size. In AUTO, vertical display is automatically calibrated in terms of V/cm on the input attenuator setting when signal was being processed.

3. PRESET TOTALIZER. When FUNCTION set to HISTOGRAM, specifies total number of samples to be histogrammed. In OFF, histograms continue until manually stopped by pressing OUTPUT DISPLAY or PROCESS STOP pushbutton.

4. SWEEP TIME: Determines rate at which address register steps through Memory, (processing rate). In EXT, input signal connected through SAMPLE INPUT connector (see item 7, Figure 3-3) is converted to a train of sampling pulses; nearly any periodic waveform may be used for this application.

   In Frequency HISTOGRAM mode, SWEEP TIME control calibrates Horizontal axis (Figure 3-9).

Figure 3-4. Control Plug-in (5486A) Cont'd.

5. AC/DC: Selects ac coupling or dc coupling of input sync signals in SUMMATION and AVERAGE mode.

6. Input connector: Female BNC. Sync input for SUMMATION and AVERAGE mode; signal input for HISTOGRAM mode. See Figure 3-7 through Figure 3-10.

7. TRIGGER SOURCE/LEVEL: Operates in SUMMATION, AVERAGE, and HISTOGRAM modes only.

   TRIGGER SOURCE selects triggering signal from: INTERNAL, uses sync signal generated at end of each sweep (5480A is free-running). LINE, uses signal derived from power line frequency. EXTERNAL + or -, uses signal at BNC connector (item 6); derives sync pulse from positive or negative signal slope.

8. PRE-ANALYSIS DELAY: Provides calibrated 20 μsec to 0.5 sec delay between input sync signal and start of sweep. Conserves memory and increases resolution by eliminating unnecessary front portion of data waveform display (see Figure 3-2).

9. POST-ANALYSIS DELAY: Provides uncalibrated zero to 10 second delay of output sync pulse occurring at end of every sweep. If this sync output is used to start each repetition of an experiment, start of experiment will be delayed by this amount (see Figure 3-2).

10. SWEEP NUMBER (2^N): Selects number of sweeps or repetitions to be averaged. Dial is calibrated in N, number of sweeps is 2^N (for example, SWEEP NUMBER 3 causes 8 sweeps to be averaged). Signal-to-noise ratio improvement in dB is approximately 3N. For example, where N is 3, dB improvement is 9 dB.

11. PRESET/NORMAL:

    PRESET (AVERAGE): 5480A averages number of sweeps selected by SWEEP NUMBER, stops and DISPLAYs result (see Figure 3-7). This is stable averaging. *

    NORMAL (AVERAGE): 5480A averages number of sweeps selected by SWEEP NUMBER, and continues averaging with this number of sweeps defining the weighting time constant until stopped manually. This is weighted averaging. (See Figure 3-7.)

    PRESET (SUMMATION): 5480A adds number of sweeps selected by SWEEP NUMBER control, stops and DISPLAYs result (see Figure 3-8). *

    NORMAL (SUMMATION): 5480A adds inputs until manually stopped (see Figure 3-8). The AUTO scaling feature of SENSITIVITY MULTIPLIER ceases operation in NORMAL mode during SUMMATION after SWEEP NUMBER has been reached.

---

* NOTE: In PRESET (AVERAGE) or PRESET (SUMMATION), and SWEEP NUMBER is 19, 5480A will stop and DISPLAY result after 2^{18} sweeps.

Figure 3-5. Two Channel Input Plug-in (5485A)

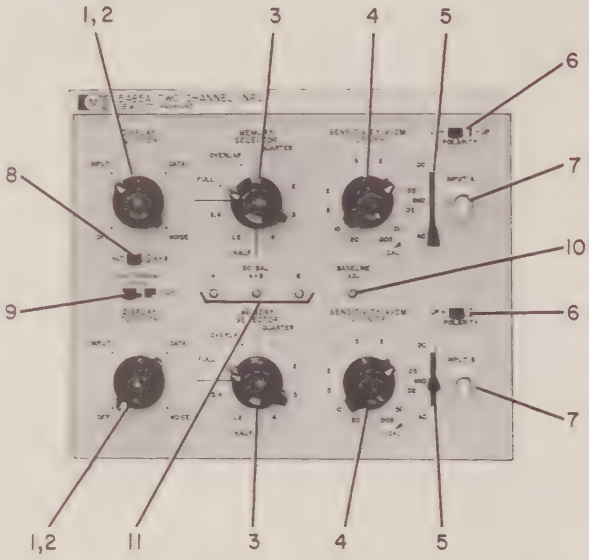

DESCRIPTION: Accepts one or two channels of input data to be presented as vertical portion of Signal Analyzer display.

CONTROLS, CONNECTORS:

1. DISPLAY: Selects CRT display for its channel. INPUT displays raw, unprocessed input signal. DATA displays averaged signal, MCS, or histogram. NOISE displays difference between INPUT and averaged signal. OFF turns channel off (see item 3).

2. POSITION: Adjusts vertical position of its channel on CRT display.

3. MEMORY SELECTOR: Selects portion of Memory to be used for storage, display, or processing. Memory is divided into four quarters. Operator may select memory portions for either channel as follows:

   QUARTER 1
   QUARTER 2
   QUARTER 3
   QUARTER 4
   HALF (QUARTERS 1 and 2)
   HALF (QUARTERS 3 and 4)
   FULL (QUARTERS 1, 2, 3, and 4)

   In OVERLAP all four quarter sections are displayed simultaneously as separate traces.

   When MEMORY SELECTOR controls are set to cause both channels to be connected to same Memory quarter, A rules. For example, if MEMORY SELECTOR A is set to FULL, no quarter is left for B; or, if MEMORY SELECTOR A is set to QUARTER 1, and MEMORY SELECTOR B set to FULL, Channel A gets QUARTER 1, and Channel B gets QUARTERs 2, 3, and 4.

4. SENSITIVITY/VERNIER:

   SENSITIVITY: Attenuates input signal and provides calibration of vertical display axis from 5 mV/cm to 20 V/cm.

   VERNIER: Provides continuous, uncalibrated attenuation of vertical display axis. Does not affect input signal amplitude stored in memory.

5. DC/GND/AC: Switches from dc coupling, grounding, or ac coupling of input. In GND, input connector is open-circuited, and input to amplifier is grounded to provide a zero reference.

6. UP+/-UP: Inverts input signal, allowing waveform to be displayed with positive voltage above baseline (UP+) or below baseline (-UP).

7. INPUT: Female BNC connector. Input for AVERAGE or SUMMATION functions (see Figure 3-7 and Figure 3-8).

8. ALT/A+B: In ALT, two channels operate separately. In A + B, signal at INPUT B is added to signal at INPUT A and sum is fed through Channel A only. Difference between two signals can be averaged by setting one channel to UP+ and other to -UP.

9. HISTOGRAM FREQ/TIME: If Logic Plug-in FUNCTION is set to HISTOGRAM, FREQ displays a frequency histogram (use above 1 kHz), or TIME displays a period (time) histogram (use below 1 kHz). See Figure 3-9.

10. BASELINE ADJ: Adjusts baseline to prevent baseline drift during summation.

11. DC BAL controls: Compensates for small dc offsets in the input circuits so dc input will be stored as "0" in the memory.

Figure 3-6. Setup and Turn-on

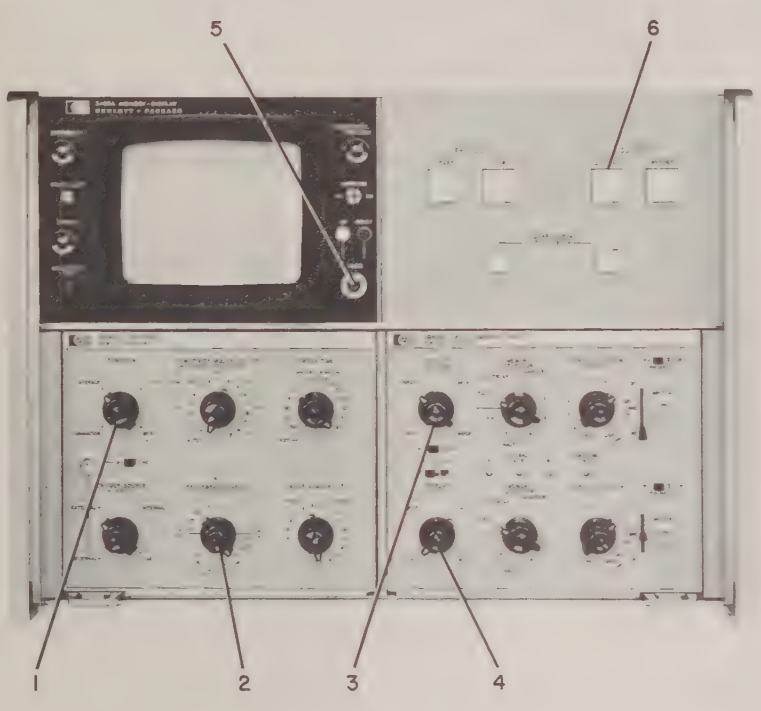

SETUP:

Connect input signals and any auxiliary equipment to Signal Analyzer System. Input/output signal specifications and typical setups are given in Section II.

Set 115/230-volt slide switch (see item 16, Figure 3-3) so numbers indicating line voltage to be used are exposed. Install correct fuse for this line voltage (use 2.5A slow-blow for 115V; 1.25A slow-blow for 230V).

Connect Signal Analyzer to ac line.

NOTE: Operating instructions and indications below are for standard Signal Analyzer Systems with no auxiliary equipment connected to J15, J16, J17, or J18. Operating instructions for systems with connections to these connectors are contained in manuals for the auxiliary equipment.

Set controls as listed below:

1. FUNCTION to AVERAGE.
2. PRE-ANALYSIS DELAY and POST-ANALYSIS DELAY to "0" and OFF, respectively.
3. Channel A DISPLAY to DATA.
4. Channel B DISPLAY to OFF.

TURN-ON:

5. Turn on ac power. POWER switch (item 5) is near lower right corner of CRT. At turn-on, the white ON and PROCESS STOP switch lamps will light. There will be no CRT display.

6. Press OUTPUT DISPLAY pushbutton. Button will light, and display appear on CRT. Observe CRT display for each of the following Channel A DISPLAY switch positions: FULL; HALF 3, 4; HALF 1, 2; QUARTER 1; QUARTER 2; QUARTER 3, QUARTER 4. Display for each setting represents what was in that portion of memory when Signal Analyzer was turned off. If memory section being displayed is not important, erase it by pressing both CLEAR DISPLAY pushbuttons simultaneously; and quarter or half of the memory can be erased independently of other memory sections.

SELECT OPERATING MODE:

Operating mode is selected by FUNCTION switch (item 1). AVERAGE (see Figure 3-7), SUMMATION (see Figure 3-8), HISTOGRAM (see Figure 3-9), and MULTICHANNEL SCALING (MCS) (see Figure 3-10).

Figure 3-7. Average

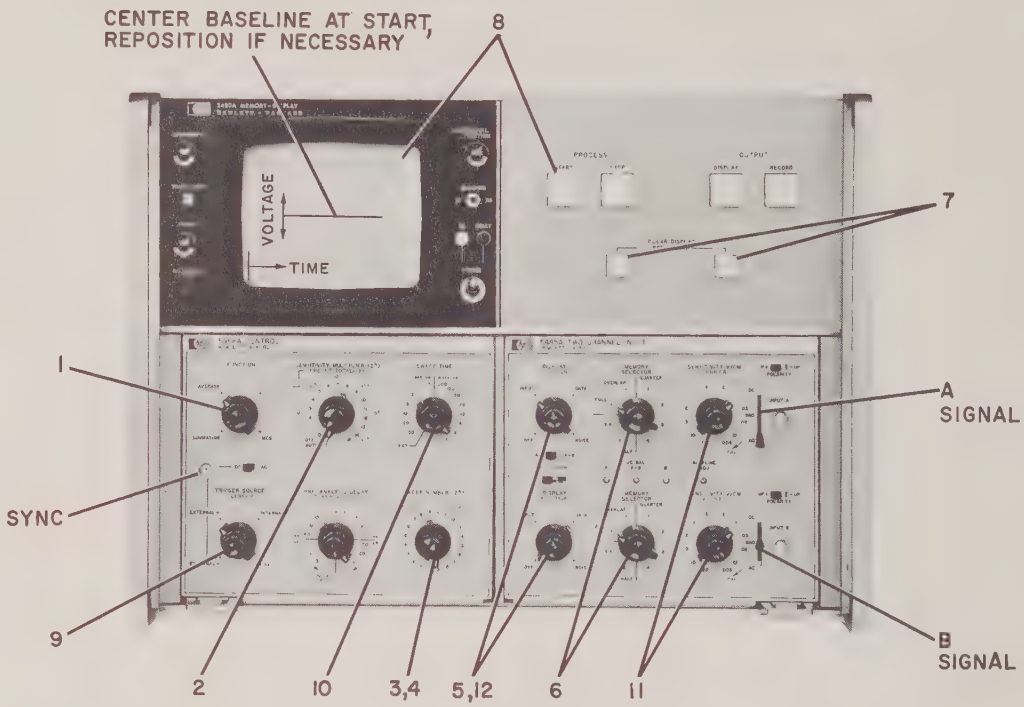

DESCRIPTION: Analyzer performs either weighted or calibrated average. Display resembles oscilloscope presentation of input signal, with noise averaged out. Up to 60 dB of signal-to-noise ratio improvement can be obtained. Vertical display is calibrated in V/cm, noisy signal appears at full value and noise is gradually removed, leaving only signal.

Perform SETUP and TURN-ON procedure described in Figure 3-6.

CONTROL SETTINGS

1. FUNCTION to AVERAGE.
2. SENSITIVITY MULTIPLIER fully CCW.
3. SWEEP NUMBER to about 6.
4. PRESET/NORMAL to NORMAL.
5. Channel A and Channel B DISPLAY to DATA (or OFF, if Channel is not used).
6. Channel A and Channel B MEMORY SELECTOR. As desired.
   a. Larger memory sections provide more signal resolution.
   b. A processed signal can be stored in one memory section while processing is done in another section.
   c. If MEMORY SELECTOR controls are set to feed A and B to same quarter section of memory, A overcomes B.
   d. Signal processing occurs only
      1) In memory sections selected by MEMORY SELECTOR switches,
      2) when PROCESS START button is lighted,
      3) and sync signal is received by Logic plug-in.
7. Clear display by simultaneously pressing both CLEAR DISPLAY buttons. OUTPUT DISPLAY button will light, and CRT will display a horizontal line.
8. Press PROCESS START pushbutton. Button will light, and OUTPUT DISPLAY light will go out. Display will show signal processing.
9. If necessary, select TRIGGER SOURCE and adjust LEVEL to initiate processing. Ordinarily, best triggering is obtained using an external triggering source having the same frequency as noisy signal to be observed.
10. Adjust SWEEP TIME for best display of input signal. Press both CLEAR DISPLAY buttons and PROCESS START button each time SWEEP TIME is changed.

Figure 3-7. Average Cont'd.

11. Adjust VERTICAL SENSITIVITY for each displayed input channel to provide best CRT display of input signal.

12. Use POSITION controls to separate or center signals vertically.

The above procedure provides a means for obtaining a rough measurement of signal amplitude and frequency, and positioning display. Information below enables refinement of measurement.

SIGNAL-TO-NOISE RATIO IMPROVEMENT VS RESPONSE TO INPUT SIGNAL CHANGES

Signal-to-noise ratio improvement can be determined approximately by SWEEP NUMBER setting, and can be expressed in dB as 3N, where N is SWEEP NUMBER. For example, where N is 10, signal-to-noise ratio improvement is 30 dB (after 2^N, or 1024 sweeps).

Higher SWEEP NUMBER settings result in greater signal-to-noise ratio improvement.

Lower SWEEP NUMBER settings enable faster response to input signal changes or changes in Signal Analyzer control settings when PRESET/NORMAL switch is on NORMAL.

NOTE: To prevent invalid readings, the following SWEEP NUMBER and SWEEP TIME combinations should not be used:

SWEEP TIME	SWEEP NUMBER
1 msec/cm	19 (PRESET) see NOTE under NORMAL VS PRESET
2 msec/cm	19, 18
5 msec/cm or slower	19, 18, 17, 16

This SWEEP NUMBER limitation (except 1 msec/cm) is directly related to the 5-, 7-, or 9-bit resolution of the Analog-to-Digital Converter (depending on SWEEP TIME). If input signals are so noisy that 2^{15} sweeps are not sufficient (2^{17} sweeps at 2 msec/cm), the modification below may be made to the 5485A Dual Channel Input plug-in; the modification restricts resolution to 5 bits for all SWEEP TIMEs.

Modification to 5485A for decreased resolution:

1. Remove connecting wires from XA3(2) and XA3(3).

2. Tape ends of wires removed in step 1.

3. Ground pins XA3(2) and XA3(3) by connecting them to XA3(17).

NORMAL VS PRESET

NORMAL: Signal Analyzer averages all sweeps until it completes 2^N sweeps. After this number of sweeps is completed, averaging process continues, except that previous information is weighted exponentially with a time constant equal to the time required to take 2^N sweeps. Averaging continues until PROCESS STOP (no CRT display) or OUTPUT DISPLAY pushbutton is pressed.

PRESET: Signal Analyzer averages all sweeps until it completes 2^N sweeps.* After this number of sweeps is completed, averaging process stops and Analyzer automatically switches to OUTPUT DISPLAY. Note that the value of 2^N increases very rapidly (see table in Figure 3-5), and large values of 2^N can result in very long experiment times. A nomograph (Figure 3-1) is provided to enable approximations of experiment length from PROCESS START to OUTPUT DISPLAY. As with NORMAL, averaging process can be stopped at any time by pressing PROCESS STOP or OUTPUT DISPLAY button.

CRT DISPLAY

Signal is displayed full-scale and noise is reduced with each sweep.

Vertical calibration for displayed channel is determined by SENSITIVITY V/CM control.

Horizontal calibration is determined by SWEEP TIME and X1/X5 switch.

In OUTPUT DISPLAY, vertical display can be expanded by changing setting of SENSITIVITY MULTIPLIER.

VERNIER of displayed channel provides for uncalibrated reduction in display size (does not affect input SENSITIVITY).

For PRE-ANALYSIS DELAY and POST-ANALYSIS DELAY information, see Figure 3-2.

*NOTE: Except for N = 19. In PRESET, N = 19 and N = 18 are same, 5480A sweeps for 2^{18} sweeps, then DISPLAYs result.

Figure 3-8. Summation

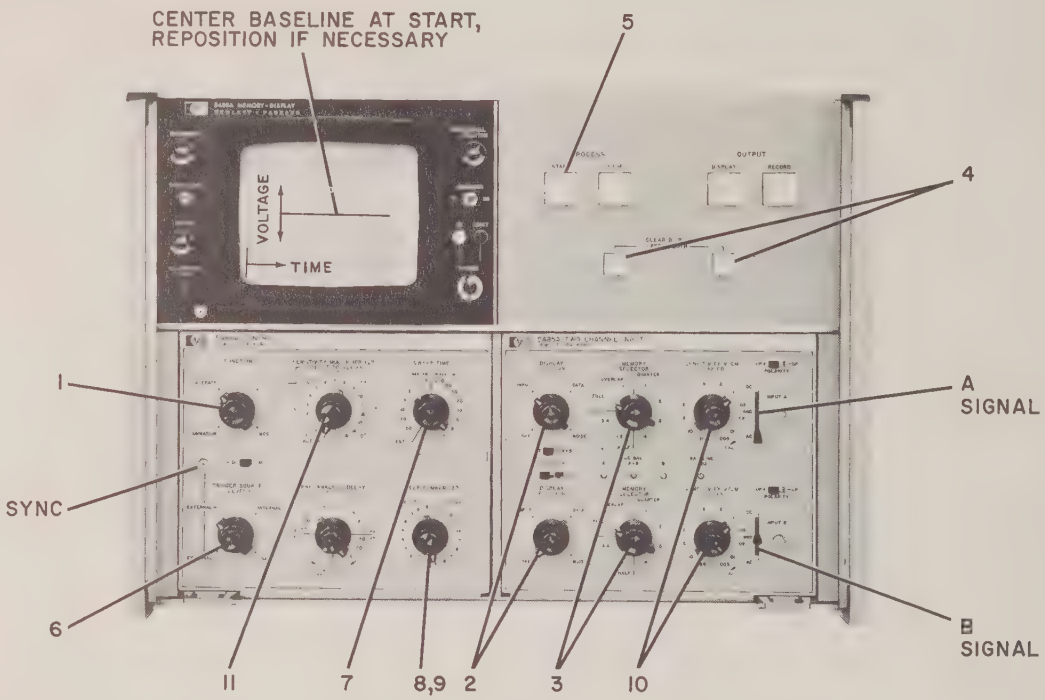

DESCRIPTION: Analyzer adds successive repetitions of noisy input waveform, resulting in an uncalibrated display which is proportional to averaged signal. Display resembles osciiloscope presentation of input signal, growing with each successive sweep; display can be halved automatically when it reaches some predetermined size, to keep it on screen.

Perform SETUP and TURN-ON procedure described in Figure 3-6.

CONTROL SETTINGS

1. FUNCTION to SUMMATION.

2. Channel A and Channel B DISPLAY to DATA (or to OFF, if channel is not used).

3. Channel A and Channel B MEMORY SELECTOR. As desired.

   a. Larger memory sections provide more signal resolution.

   b. A processed signal can be stored in one memory section while processing is done in another section.

   c. If MEMORY SELECTOR controls are set to feed A and B to same quarter section of memory, A overcomes B.

   d. Signal processing only occurs:
      1) In memory sections selected by MEMORY SELECTORs.
      2) When PROCESS START button is lighted.
      3) When sync signal is received by Logic plug-in.

4. Clear display by simultaneously pressing both CLEAR DISPLAY buttons. OUTPUT DISPLAY button will light, and CRT will display a horizontal line.

5. Press PROCESS START pushbutton. Button will light, and OUTPUT DISPLAY light will go out. Display will show signal processing.

6. If necessary, select TRIGGER SOURCE and adjust LEVEL to begin processing. Ordinarily, best triggering is obtained using an external triggering source having same frequency as noisy signal to be observed.

7. Adjust SWEEP TIME for best display of input signal. Press both CLEAR DISPLAY buttons and PROCESS START button each time SWEEP TIME is changed.

8. SWEEP NUMBER to 19.

9. PRESET/NORMAL to PRESET.

Figure 3-8. Summation Cont'd.

CRT DISPLAY

Signal starts at zero amplitude and grows with each sweep as Signal Analyzer totalizes input sweeps. Rate of vertical presentation growth depends on settings of SENSITIVITY for each displayed channel and SENSITIVITY MULTIPLIER. To keep growing display on-screen, SENSITIVITY MULTIPLIER setting is decreased manually or automatically, as described below.

Vertical display is not calibrated.

Horizontal display is calibrated by SWEEP TIME and X1/X5 settings.

SENSITIVITY MULTIPLIER

Controls vertical display size.

When set to AUTO (and SWEEP NUMBER set to 19):

1. Vertical display is cut in half at end of every 2^N (first, second, fourth, eighth, etc) sweep.
2. Display continues growing at half of previous rate until it is again cut in half.
3. Unless SUMMATION process is stopped (by pressing PROCESS STOP or OUTPUT DISPLAY pushbutton), vertical display is divided in half through the N = 15 sweep; after N = 15, display keeps growing.

NOTES:

1. SENSITIVITY MULTIPLIER and SWEEP NUMBER switches interact, most noticeably at low SWEEP NUMBER settings. When SENSITIVITY MULTIPLIER is set to AUTO, display is cut in half every 2^N sweeps until N is same number set by SWEEP NUMBER switch. From this time on, no additional AUTO scaling is provided, CRT display grows and must be manually scaled using "N" SENSITIVITY MULTIPLIER SETTINGS.
2. SENSITIVITY MULTIPLIER can be set to any N number from 1 to 15. If setting is changed during a sweep, display size will change at end of that sweep.
3. SENSITIVITY MULTIPLIER can be switched from AUTO to any N number and back to AUTO, and will resume AUTO scaling without loss of count of sweeps.
4. To prevent invalid readings, the following SWEEP NUMBER and SWEEP TIME combinations should not be used when SENSITIVITY MULTIPLIER is in AUTO:

SWEEP TIME	SWEEP NUMBER
1 msec/cm	19 (PRESET) see NOTE under NORMAL VS PRESET
2 msec/cm	19, 18
5 msec/cm or slower	19, 18, 17, 16

This SWEEP NUMBER limitation (except 1 msec/cm) is directly related to the 5-, 7-, or 9-bit resolution of the Analog-to-Digital Converter (depending on SWEEP TIME). If input signals are so noisy that 2^{15} sweeps are not sufficient (2^{17} sweeps at 2 msec/cm), the modification below may be made to the 5485A Dual Channel Input plug-in; the modification restricts resolution to 5 bits for all SWEEP TIMEs.

Modification to 5485A for decreased resolution:

a. Remove connecting wires from XA3(2) and XA3(3).
b. Tape ends of wires removed in step 1.
c. Ground pins XA3(2) and XA3(3) by connecting them to XA3(17).

5. If power is lost following summation, and instrument is in DISPLAY, automatic scaling associated with AUTO may be lost and display will not be calibrated. (This happens because the AUTO scaling factor is stored in an active register.) Display calibration can be regained, however, by setting SENSITIVITY MULTIPLIER to: 24 - (SWEEP NUMBER + number of bits).

number of bits = 5 in 1 msec/cm SWEEP TIME
= 7 in 2 msec/cm SWEEP TIME
= 9 in 5 msec/cm or slower SWEEP TIMEs.

EXAMPLE: SWEEP NUMBER is 6, SWEEP TIME is 10 msec/cm. Set SENSITIVITY MULTIPLIER to 24 - (6 + 9) or 9.

NORMAL VS PRESET

NORMAL: Set SWEEP NUMBER to 19. Analyzer totalizes until manually stopped by pressing PROCESS STOP or OUTPUT DISPLAY pushbutton. AUTO scaling feature of SENSITIVITY MULTIPLIER ceases operation in NORMAL mode during SUMMATION after SWEEP NUMBER has been reached.

PRESET: Set SWEEP NUMBER to number of sweeps to be totalized. Signal Analyzer will totalize this number of sweeps*, stop processing, and display result.

*NOTE: Except for N = 19. In PRESET, N = 19 and N = 18 are same, 5480A sweeps for 2^{18} sweeps, then DISPLAYs result.

Figure 3-9. Histograms

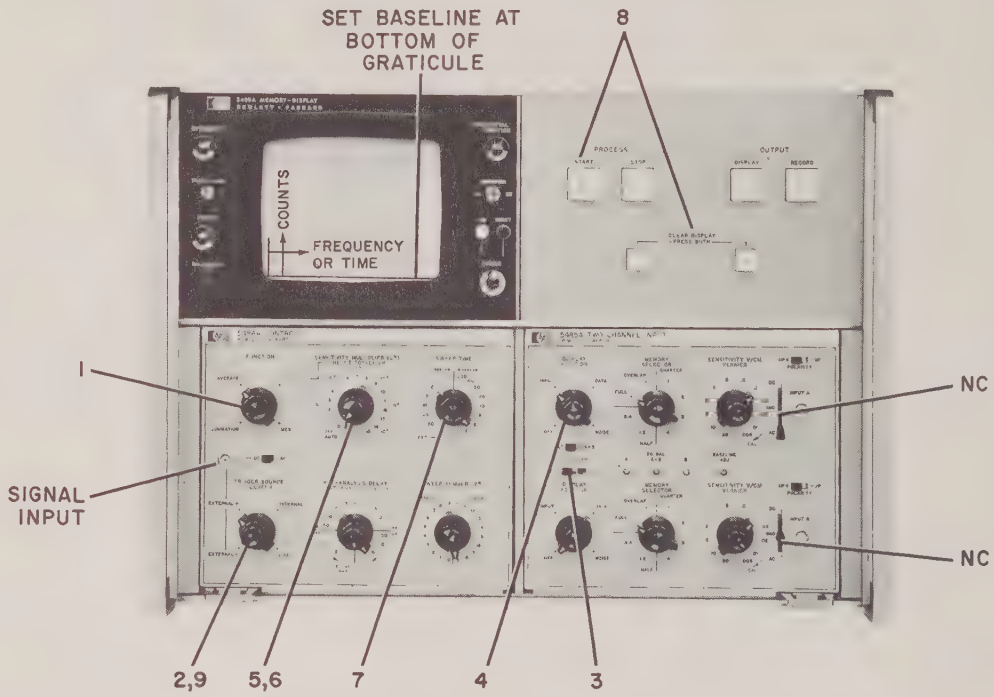

DESCRIPTION: Analyzer displays a probability-versus-frequency (or time interval) plot. Number of incoming pulses during a set gate time determines memory location into which a count is placed. After several gate times, a distribution results.

Perform SETUP and TURN-ON procedure described in Figure 3-6.

CONTROL SETTINGS

1. FUNCTION to HISTOGRAM
2. TRIGGER SOURCE to either EXTERNAL position
3. HISTOGRAM to:
   FREQ for input signals between 1 kHz and 1 MHz
   TIME for input signals below 1 kHz
4. Channel A DISPLAY to DATA
5. SENSITIVITY MULTIPLIER to 15
6. PRESET TOTALIZER to OFF, or to number of events to be accumulated.
7. SWEEP TIME to 1 msec/cm
8. Press both CLEAR DISPLAY buttons, then PROCESS START.
9. Adjust TRIGGER LEVEL, if necessary, to enable triggering.

CRT DISPLAY

SWEEP TIME may be adjusted for best display.

Horizontal baseline calibration is as follows:

For TIME HISTOGRAMS, read calibration directly from SWEEP TIME setting.

For FREQ HISTOGRAMS, convert SWEEP TIME to frequency/cm, using chart below:

SWEEP TIME Setting	Display Calibration	Max Input Frequency	Usable Horiz Range
1 msec/cm	10 MHz/cm	1 MHz	0.1 cm
2 msec/cm	5 MHz/cm	1 MHz	0.2 cm
5 msec/cm	2 MHz/cm	1 MHz	0.5 cm
10 msec/cm	1 MHz/cm	1 MHz	1.0 cm
20 msec/cm	500 kHz/cm	1 MHz	2.0 cm
50 msec/cm	200 kHz/cm	1 MHz	5.0 cm
100 msec/cm	100 kHz/cm	1 MHz	10.0 cm
200 msec/cm	50 kHz/cm	500 kHz*	10.0 cm
.5 sec/cm	20 kHz/cm	200 kHz*	10.0 cm
1 sec/cm	10 kHz/cm	100 kHz*	10.0 cm
2 sec/cm	5 kHz/cm	50 kHz*	10.0 cm
5 sec/cm	2 kHz/cm	20 kHz*	10.0 cm
10 sec/cm	1 kHz/cm**	10 kHz*	10.0 cm

* Maximum frequency that can be displayed.
** For frequencies below 1 kHz, use TIME HISTOGRAM mode.

Figure 3-10. MCS (Multichannel Scaling)

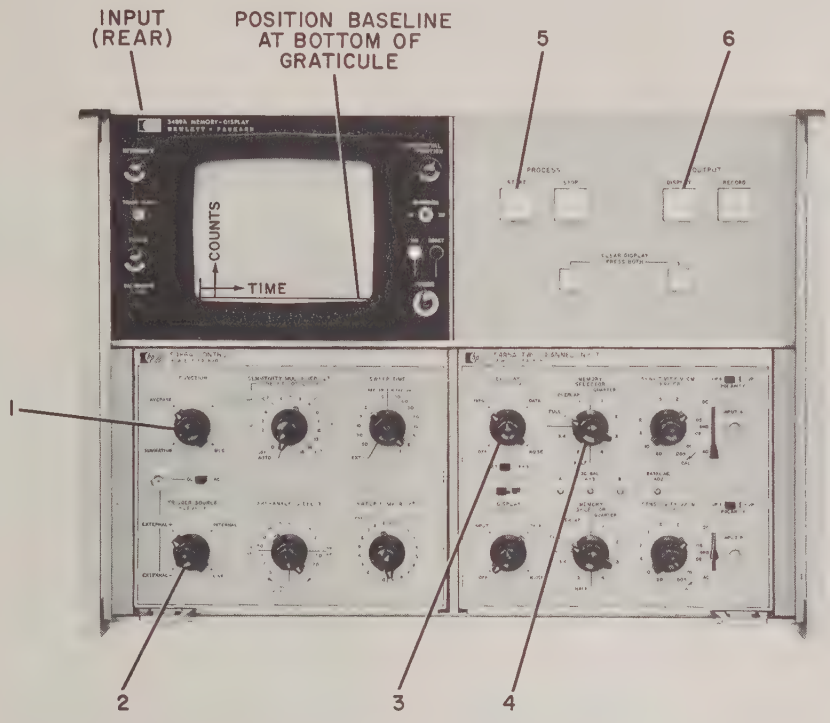

DESCRIPTION: Analyzer displays a plot of frequency-versus-time. Analyzer sweeps through its memory, remaining at each location for a set gate time. Number of counts placed in each location is determined by number of input pulses during gate time for that location.

Perform SETUP and TURN-ON procedure described in Figure 3-6.

CONTROL SETTINGS

1. FUNCTION to MCS
2. TRIGGER SOURCE to INTERNAL
3. Channel A DISPLAY to DATA. There is no Channel B display.
4. Channel A MEMORY SELECTOR to FULL.
5. Press PROCESS START button.
6. After about 10 seconds press OUTPUT DISPLAY button.

CRT DISPLAY

During MCS processing, CRT display is only a dot moving across screen at rate determined by SWEEP TIME control. When OUTPUT DISPLAY is pressed, display will appear.

Display represents number of counts received at each horizontal position as memory is stepped through all 1000 positions. This represents a "window" between 10 msec and 500 sec (8.34 min) wide, determined by SWEEP TIME setting.

If MCS display is not satisfactory, try a different SWEEP TIME setting. Be sure to clear display when changing SWEEP TIMEs.

Vertical display is not calibrated.

Horizontal display is calibrated by SWEEP TIME. Either the HORIZ DAC or SWEEP OUTPUT voltage (available at rear-panel connectors) may be used to control MCS input source, to relate input signal frequency to horizontal channel being scaled, instead of the more usual time variation.

SECTION IV

MAINTENANCE

4-1. SCHEDULING

4-2. Preventive maintenance scheduling depends, partly, on the system with which the 5480A Signal Analyzer System is used. The maintenance intervals below are intended to serve as a guide to maintenance scheduling.

a. DAILY: Operator adjustments (Paragraph 4-5).

b. MONTHLY: Perform Incoming Inspection Check, Table 2-2. (Time: approximately one hour.)

c. EVERY THREE MONTHS:

1) Clean all assemblies (see Paragraph 4-12). (Time: approximately one hour.)

2 Perform Incoming Inspection Check, Table 2-2. (Time: approximately one hour.)

d. EVERY SIX MONTHS:

1) Clean all assemblies (see Paragraph 4-12). (Time: approximately one hour.)

2) Perform complete Calibration and Adjustment procedure (see 5480A Service Manual, Volume I). (Time: approximately two hours.)

3) Perform Incoming Inspection Check, Table 2-2. (Time: approximately one hour.)

4-3. LUBRICATION

4-4. The Models 5480A, 5485A, and 5486A require no lubrication.

4-5. OPERATOR ADJUSTMENTS

4-6. The procedures below should be performed only if necessary. Adjustments are for DC BAL and BASELINE of 5485A plug-in.

4-7. Set Signal Analyzer controls as follows:

FUNCTION to AVERAGE
TRIGGER SOURCE to INTERNAL
PRE-ANALYSIS DELAY to "0"
POST-ANALYSIS DELAY to OFF
SWEEP NUMBER to "0"
PRESET/NORMAL to NORMAL
SWEEP TIME to 1 sec/cm
SENSITIVITY MULTIPLIER to AUTO
PRESET TOTALIZER to OFF
MAGNIFIER to X1
SCALE CAL to OFF
SAMPLE to INT
SAWTOOTH/TRIANGLE to SAWTOOTH
DISPLAY INTERLACE to IN
A DISPLAY to DATA
B DISPLAY to DATA
A MEMORY SELECTOR to FULL
B MEMORY SELECTOR to FULL
A+B/ALT to ALT
HISTOGRAM to OFF
A SENSITIVITY to .005 V/CM
B SENSITIVITY to .005 V/CM
A SENSITIVITY VERNIER to CAL
B SENSITIVITY VERNIER to CAL
A POLARITY to UP+
B POLARITY to UP+
A AC/GND/DC to GND
B AC/GND/DC to GND
POWER switch up (POWER ON)

4-8. DC BAL A+B.

a. Set Signal Analyzer controls as in Paragraph 4-4.

b. Set A+B/ALT to A+B.

c. Press both CLEAR DISPLAY pushbuttons.

d. Press PROCESS START.

e. Observe moving discontinuity on CRT trace.

f. Adjust DC BAL A+B to minimize discontinuity; discontinuity should be less than 0.2 cm.

g. Check adjustment by repeating steps c, d, and e.

4-9. DC BAL A.

a. Set Signal Analyzer controls as in Paragraph 4-4.

b. Set A+B/ALT to ALT.

c. Press both CLEAR DISPLAY pushbuttons.

d. Press PROCESS START.

e. Observe moving discontinuity on CRT trace.

f. Adjust DC BAL A to minimize discontinuity; discontinuity should be less than 0.2 cm.

g. Check adjustment by repeating steps c, d, and e.

4-10. DC BAL B.

a. Set Signal Analyzer controls as in Paragraph 4-4.

b. Set Channel A DISPLAY to OFF.

c. Set A+B/ALT to ALT.

d. Press both CLEAR DISPLAY pushbuttons.

e. Press PROCESS START.

f. Observe moving discontinuity on CRT trace.

g. Adjust DC BAL B to minimize discontinuity; discontinuity should be less than 0.2 cm.

h. Check adjustment by repeating steps d, e, and f.

4-11. BASELINE.

a. Set Signal Analyzer controls as in Paragraph 4-4.

b. Set FUNCTION to SUMMATION.

c. Press both CLEAR DISPLAY pushbuttons.

d. Press PROCESS START.

e. Observe moving discontinuity on CRT trace.

f. Adjust BASELINE ADJ to minimize discontinuity.

NOTE: If bipolar signals are going to be summed, it may be desirable to purposely offset the SUMMATION baseline so cumulative zero crossing errors will not be present in summed waveform.

4-12. CLEANING

4-13. Remove dust and dirt from all assemblies, especially power supplies and memory section. Check printed circuit board contacts for tarnish and/or corrosion. Clean assemblies more often than recommended interval, if Signal Analyzer System is used in a dirty or dusty area.

4-14. For access to internal assemblies, remove instrument top and bottom covers. The five sections of the Model 5480A are located within the instrument as follows:

a. Display section: Upper left-hand, front.

b. Main Frame logic section: Lower left-hand, rear.

c. Memory section: Upper right-hand, front, on swing-out deck. To swing deck, loosen locking screws located at front of deck and lift front of deck.

d. Switch logic section: Upper right-hand, front, just below front of memory deck.

e. Power supply section: Lower right-hand, rear.

4-15. CALIBRATION AND ADJUSTMENT PROCEDURE

4-16. Calibration and Adjustment procedure for the Signal Analyzer system is in 5480A Service Manual, Volume I.

CATHODE RAY TUBE WARRANTY

The cathode ray tube (CRT) supplied in the Hewlett-Packard 5480A, and replacement CRTs purchased from HP, are guaranteed by the Hewlett-Packard Company against electrical failure for a period of one year from date of sale. Broken tubes or tubes with burned phosphor are not included under this guarantee. If the CRT is broken when received, a claim should be made with the responsible carrier.

Your nearest Hewlett-Packard Sales and Service office (listed at rear of instrument manual) maintains a stock of replacement tubes and will assist in processing the warranty claim.

In order to ensure credit for a CRT under the warranty period, the reverse side of this sheet should be filled out completely and returned with the defective tube to the nearest HP Sales and Service office. To avoid damage to the tube while in shipment, carefully follow the shipping instructions listed on the reverse side of this sheet; credit is not allowed on broken tubes.

CRT WARRANTY CLAIM

SHIPPING INSTRUCTIONS

1. Carefully wrap the tube in 1/4 inch thick cotton batting or other soft padding material.
2. Wrap the above in heavy kraft paper.
3. Pack wrapped tube in a rigid container which is at least 4 inches larger than the tube in each dimension.
4. Surround the tube with at least 4 inches of packed excelsior or similar shock absorbing material; be sure the packing is tight all around the tube.

FROM: DATE _____

NAME _____

COMPANY _____

ADDRESS _____

For additional information, contact:

NAME _____

COMPANY _____

ADDRESS _____

1. HP INSTRUMENT a) MODEL _____
   b) SERIAL NO. _____ – _____
2. CRT a) TYPE (on bulb) _____ – _____
   b) SERIAL NO. (on CRT base) _____
3. Is defective tube original? YES _____ NO _____
4. Date purchased (if available) _____
5. Describe nature and/or symptoms of trouble. _____
   _____
   _____
   _____
6. Describe operation conditions prior to and at time of failure. (Please estimate CRT "on-time" since purchase.) _____
   _____
   _____
   _____

HEWLETT · PACKARD

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

UNITED STATES, CENTRAL AND SOUTH AMERICA, CANADA

UNITED STATES

ALABAMA
P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA
3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282

5737 East Broadway
Tucson 85716
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shafter Street
San Diego 92106
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

111 East Avenue
Norwalk 06851
Tel: (203) 853-1251
TWX: 710-468-3750

DELAWARE
3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 510-666-2214

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 8128
Madeira Beach 33708
410 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA
3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN
24315 Northwestern Highway
Southfield 48075
Tel: (313) 353-9100
TWX: 810-224-4882

MINNESOTA
2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

2812 South Brentwood Blvd.
St. Louis 63144
Tel: (314) 962-5000
TWX: 910-760-1670

NEW JERSEY
W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO
P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
1702 Central Avenue
Albany 12205
Tel: (518) 869-8462
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO
25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300

OKLAHOMA
2919 United Founders Boulevard
Oklahoma City 73112
Tel: (405) 848-2801
TWX: 910-830-6862

OREGON
Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA
2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND
873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 22813
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VERMONT
P.O. Box 2287
Kennedy Drive
South Burlington 05401
Tel: (802) 658-4455
TWX: 710-658-4712

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON
433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

***WEST VIRGINIA**
Charleston
Tel: (304) 768-1232

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia . . . North Hollywood, California . . . Paramus, New Jersey . . . Skokie, Illinois. Their complete addresses are listed above.

*Service Only

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina S.A.C.e.I
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0431
Telex: 012-1009
Cable: HEWPACKARG

BRAZIL
Hewlett-Packard Do Brasil I.e.C Ltda.
Rua Coronel: Oscar Porto, 691
Sao Paulo - 8, SP
Tel: 288-7111
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil I.e.C. Ltda.
Avenida Franklin Roosevelt 84-grupo 203
Rio de Janeiro, ZC-39, GB
Tel: 232-9733
Cable: HEWPACK Rio de Janeiro

CHILE
Héctor Calcagni y Cia, Ltda.
Bustos, 1932-3er Piso
Casilla 13942
Santiago
Tel: 4-2396
Cable: Calcagni Santiago

COLOMBIA
Instrumentacion
Henrik A. Langebaek & Kier Ltda.
Carrera 7 No. 48-59
Apartado Aereo 6287
Bogota, 1 D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Telex: 044-400

COSTA RICA
Lic. Alfredo Gallegos Gurdián
Apartado 3243
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR
Laboratorios de Radio-Ingenieria
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 12496
Cable: HORVATH Quito

EL SALVADOR
Electrónica
Apartado Postal 1589
27 Avenida Norte 1133
San Salvador
Tel: 25-74-50
Cable: ELECTRONICA
San Salvador

GUATEMALA
Olander Associates Latin America
Apartado Postal 1226
Ruta 4, 6-53, Zona 4
Guatemala City
Tel: 63958
Cable: OLALA Guatemala City

JAMAICA
General Engineering Services, Ltd.
27 Dunrobin Ave.
Kingston
Tel: 42657
Cable: GENSERV

MEXICO
Hewlett-Packard Mexicana, S.A. de C.V.
Moras 439
Col. del Valle
Mexico 12, D.F.
Tel: 5-75-46-49

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electrónica Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 30833
Cable: ELECTRON Panama City

PERU
Fernando Ezeta B.
Avenida Petit Thouars 4719
Miraflores
Casilla 3061
Lima
Tel: 45-2335
Cable: FEPERU Lima

PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-Pta. de Tierra
San Juan 00906
Tel: (809) 725-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard De Venezuela C.A.
Apartado 50933
Caracas
Tel. 71.88.05, 71.88.69, 71.99.30
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11745 Jasper Ave.
Edmonton
Tel: (403) 482-5561
TWX: 610-831-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
1037 West Broadway
Vancouver 12
Tel: (604) 731-5301
TWX: 610-922-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
511 Bradford Ct.
St. James
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 203
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.
50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

HEWLETT · PACKARD

ELECTRONIC INSTRUMENTATION SALES AND SERVICE

EUROPE, AFRICA, ASIA, AUSTRALIA

EUROPE

AUSTRIA
Unilabor GmbH
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna A-1095
Tel: (222) 42 61 81, 43 13 94
Cable: LABORINSTRUMENT Vienna
Telex: 75 762

BELGIUM
Hewlett-Packard Benelux S.A.
348 Boulevard du Souverain
Brussels 1160
Tel: 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK (May 70)
Hewlett-Packard A/S
Datavej 38
DK-3460 **Birkeroed**
Tel: (01) 81 66 40
Cable: HEWPACK AS
Telex: 66 40

EASTERN EUROPE
Hewlett-Packard S.A. Genf.
Korrespondenz Büro Für Ost-Europa
(Czechoslovakia, Hungary, Poland, DDR, Rumania, Bulgaria)
Innstrasse 23
Postfach
A-1204 Vienna, Austria
Tel: (222) 33 66 06
Cable: HEWPACK Vienna

FINLAND
Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
Helsinki 12
Tel: 13-730
Cable: HEWPACKOY-Helsinki
Telex: 12-1563

FRANCE
Hewlett-Packard France
Quartier de Courtaboeuf
Boite Postale No. 6
91 Orsay
Tel: 920 88 01
Cable: HEWPACK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Etroits
69 **Lyon** 5ème
Tel: 42 63 45
Cable: HEWPACK Lyon
Telex: 31617

GERMANY
Hewlett-Packard Vertriebs-GmbH
Lietzenburgerstrasse 30
1 **Berlin** 30
Tel: (0811) 211 60 16
Telex: 18 34 05

Hewlett-Packard Vertriebs-GmbH
Herrenbergerstrasse 110
703 **Böblingen**, Württemberg
Tel: 07031-6671
Cable: HEPAG Böblingen
Telex: 72 65 739

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 **Düsseldorf** 1
Tel: 68 52 58/59
Telex: 85 86 533

Hewlett-Packard Vertriebs-GmbH
Berliner Strasse 117
6 **Nieder-Eschbach/Frankfurt 56**
Tel: (0611) 50 10 64
Cable: HEWPACKSA Frankfurt
Telex: 41 32 49

Hewlett-Packard Vertriebs-GmbH
Beim Strohhause 26
2 **Hamburg** 1
Tel: 24 05 51/52
Cable: HEWPACKSA Hamburg
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 **München** 9
Tel: 0811 69 59 71/75
Cable: HEWPACKSA München
Telex: 52 49 85

GREECE
Kostas Karayannis
18, Ermou Street
Athens 126
Tel: 230301,3,5
Cable: RAKAR Athens
Telex: 21 59 62 RKAR GR

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 753-33341
Cable: HEWPIE Slough
Telex: 84413

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
20124 **Milano**
Tel: 6251 (10 lines)
Cable: HEWPACKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
00144 **Rome** - Eur
Tel: 591 2544
Cable: HEWPACKIT Rome
Telex: 61514

NETHERLANDS
Hewlett-Packard Benelux, N.V.
Weerdestein 117
P.O. Box 7825
Amsterdam, Z 11
Tel: 020-42 7777
Cable: PALOBEN Amsterdam
Telex: 13 216

NORWAY
Hewlett-Packard Norge A/S
Box 149
Nesveien 13
N-1344 **Hasium**
Tel: 53 83 60
Cable: HEWPACK Oslo
Telex: 6621

PORTUGAL
Telectra
Empresa Tecnica de Equipamentos Electricos, S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon
Telex: 1598

SPAIN
Ataio Ingenieros SA
Ganduxer 76
Barcelona 6
Tel: 211-44-66
Cable: TELEATAIO BARCELONA

Ataio Ingenieros SA
Enrique Larreta 12
Madrid, 16
Tel: 215 35 43
Cable: TELEATAIO Madrid
Telex: 2749E

SWEDEN
Hewlett-Packard (Sverige) AB
Hagakersgatan 9C
S 431 04 **Mölndal** 4
Tel: 031 - 27 68 00

Hewlett-Packard (Sverige) AB
Svetsarvägen 7
S171 20 **Solna** 1
Tel: (08) 98 12 50
Cable: MEASUREMENTS Stockholm
Telex: 10721

SWITZERLAND
Hewlett Packard (Schweiz) AG
Zurcherstrasse 20
8952 Schlieren
Zurich
Tel: (051) 98 18 21/24
Cable: HEWPACKAG Zurich
Telex: 53933

Hewlett Packard (Schweiz) A.G.
Rue du Bois-du-Lan 7
1217 Meyrin 2 **Geneva**
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2 24 86

TURKEY
Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATION Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 33341
Cable: HEWPIE Slough
Telex: 84413

Hewlett-Packard Ltd.
The Graftons
Stamford New Road
Altrincham, Cheshire
Tel: 061 258-8626

USSR
Please Contact
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
1217 Meyrin 2 **Geneva**
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva Switzerland
Telex: 2.24.86

YUGOSLAVIA
Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 34 33 32, 34 26 19
Cable: BELRAMEL Brussels
Telex: 21790

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
1217 Meyrin 2 **Geneva** Switzerland
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2.24.86

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra Empresa Técnica de Equipamentos Eléctricos SAR
Rua de Barbosa Rodrigues 42-1°
Box 6487
Luanda
Cable: TELECTRA Luanda

AUSTRALIA
Hewlett-Packard Australia Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20-1371 (6 lines)
Cable: HEWPARD Melbourne
Telex: 31024

Hewlett-Packard Australia Pty. Ltd.
61 Alexander Street
Crows Nest 2065
New South Wales
Tel: 43 7866
Cable: HEWPARD Sydney
Telex: 21561

Hewlett-Packard Australia Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65 2366
Cable: HEWPARD Adelaide

Hewlett Packard Australia Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 21-3330

Hewlett-Packard Australia Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPARD Canberra ACT

CEYLON
United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

CYPRUS
Kypronics
19-19D Hommer Avenue
P.O. Box **752**
Nicosia
Tel: 6282-75628
Cable: HE-I-NAMI

ETHIOPIA
African Salespower & Agency Private Ltd., Co.
P. O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd.
Bombay 20BR, India
Tel: 29 50 21
Telex: 2396
Cable: BLUEFROST

Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 25DD, India
Tel: 45 73 01
Telex: 2396
Cable: BLUESTAR

Blue Star Ltd.
14/40 Civil Lines
Kanpur, India
Tel: 6 88 82
Cable: BLUESTAR

Blue Star, Ltd.
7 Hare Street
P.O. Box 506
Calcutta 1, India
Tel: 23-0131
Telex: 655
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lajpat Nagar
New Delhi 24, India
Tel: 62 32 76
Telex: 463
Cable: BLUESTAR

Blue Star, Ltd.
96 Park Lane
Secunderabad 3, India
Tel: 7 63 91
Cable: BLUEFROST

Blue Star, Ltd.
23/24 Second Line Beach
Madras 1, India
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR

Blue Star, Ltd.
1B Kaiser Bungalow
Dindli Road
Jamshedpur, India
Tel: 38 04
Cable: BLUESTAR

INDONESIA
Bah Bolon Trading Coy. N.V.
Djalah Merdeka 29
Bandung
Tel: 4915 51560
Cable: ILMU
Telex: 809

IRAN
Telecom, Ltd.
P. O. Box 1812
240 Kh. Saba Shomali
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL
Electronics & Engineering Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: Bastel Tv 033-569

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: 23-1641

Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
59 Yoyogi 1-chrome
Shibuya-ku, **Tokyo**
Tel: 370-2281/7
Telex: 232-2024YHP
Cable: YHPMARKET TOK 23-724

KENYA
R. J. Tilbury Ltd.
P. O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 68206, 58196
Cable: ARJAYTEE Nairobi

KOREA
American Trading Co., Korea, Ltd.
P.O. Box 1103
Dae Kyung Bldg
107 Sejong Ro
Chongro Ku
Seoul
Tel: 75-5841 (4 lines)
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
Clemenceau Street
P.O. Box 7213
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, **Selangor**
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE
A. N. Goncalves, LDA.
4.1 Apt. 14 Av. D. Luis
P.O. Box 107
Lourenco Marques
Cable: NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
32-34 Kent Terrace
P.O. Box 9443
Wellington, N.Z.
Tel: 56-559
Cable: HEWPACK Wellington

PAKISTAN (EAST)
Mushko & Company, Ltd.
Zirat Chambers
33, Jinnah Avenue
Dacca
Tel: 280058
Cable: NEWDEAL Dacca

PAKISTAN (WEST)
Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

PHILIPPINES
Electromex Inc.
Makati Commercial Center
2129 Pasong Tamo
Makati, Rizal D 708
P.O. Box 1028
Manila
Tel: 89-85-01
Cable: ELEMEX Manila

SINGAPORE
Mechanical and Combustion Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA
Hewlett Packard South Africa (Pty.), Ltd.
Breecastle House
Bree Street
Cape Town
Tel: 3-6019, 3-6545
Cable: HEWPACK Cape Town
Telex: 5-0006

Hewlett Packard South Africa (Pty.), Ltd.
P.O. Box 31716
30 De Beer Street
Braamfontein, **Johannesburg**
Tel: 724-4172 724-4195
Telex: 0226 JH
Cable: HEWPACK Johannesburg

TAIWAN REP. OF CHINA
Hwa Sheng Electronic Co., Ltd.
P. O. Box 1558
Room 404
Chia Hsin Building
No. 96 Chung Shan North Road, Sec. 2
Taipei
Tel: 555211 Ext. 532-539
545936, 546076, 548661
Cable: VICTRONIX Taipei

TANZANIA
R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi

THAILAND
The International Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 910722 (7 lines)
Cable: GYSOM
TLX INTENCO BK-226 Bangkok

UGANDA
R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassadeur
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARJAYTEE Nairobi

VIETNAM
Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: PENINSULA Saigon

ZAMBIA
R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461

HEWLETT hp PACKARD

05480-90011

PRINTED IN U.S.A.